



# RSB RETRIEVING TOOL

## FOR 9-5/8" X 7.000" X 6.000"

### DUAL RSB PACKER

Manual No:  
**DL-269-9625-1304**

Revision: **A**

Revision Date:  
**12/05/2019**

Authored by: *J.Anderson*

Approved by: *D.Hushbeck*

#### A) DESCRIPTION

The RSB Retrieving Tool is used to retrieve RSB Packers. This retrieving tool latches into the top sub with a standard anchor latch to allow the RSB Packer to be retrieved with a straight pull. A spring-loaded collet locates below the support ring that keeps the packer locked in a set position. Latch fingers latch into the packer. A pull shears the support ring and releases the packer. If the packer cannot be retrieved normally, this retrieving tool has a safety release that allows it to be disconnected from the packer with right-hand rotation.

#### B) RELATED TOOLS (sold separately)

B-1) 9-5/8" X 7.000" X 6.000" RSB Packer (P/N varies)—refer to applicable technical manual.

#### C) SPECIFICATION GUIDE

CASING SIZE (INCHES)	TOOL OD (INCHES)	NOMINAL ID (INCHES)	THREAD CONNECTION BOX UP	PART NUMBER
9-5/8	6.85	2.75	4-1/2 EUE	26995RT

#### D) PRE-INSTALLATION INSPECTION PROCEDURES

**CAUTION:** D&L ships tool connections made-up **HAND TIGHT**—labeled with hand-tight tape on the tool (Fig. 1)—unless stated otherwise. Tighten/torque all connections properly before operating tool.



Fig. 1

GENERAL THREAD CONNECTION TORQUE RECOMMENDATIONS			
STUB ACME / ACME THREADS	INTERNAL TAPERED TUBING THREADS		PREMIUM THREADS
	UP TO 2-3/8"	GREATER THAN 2-3/8"	
600 – 800 FT-LBS	600 – 800 FT-LBS	800 – 1,200 FT-LBS	Consult thread manufacturer's recommendations.

GENERAL SCREW TORQUE RECOMMENDATIONS									
SCREW SIZE (INCHES)	#6	#8	#10	1/4	5/16	3/8	7/16	1/2	5/8 and larger
TORQUE RANGE (INCH-POUNDS)	5 – 8	10 – 15	18 – 25	25 – 40	50 – 80	90 – 135	160 – 210	250 – 330	450 - 650

Before first use, D&L recommends disassembly and inspection of the tool unless stated otherwise. Ensure parts have not been damaged during shipping. Replace damaged parts with D&L replacement parts. Contact D&L sales for replacement part information.

Re-assemble the tool after inspection. Install parts in the correct order and orientation. Properly tighten connections.

Before re-using the tool, D&L recommends disassembly and inspection of the tool. Clean parts and ensure parts are in good working condition. Replace worn or damaged parts with D&L replacement parts.

When redressing the tool, D&L recommends replacement of all shear screws, etc. Contact D&L sales for redress kit and/or other replacement part information.

D & L OIL TOOLS  
P.O. BOX 52220 TULSA, OK 74152  
PHONE: (800) 441-3504 [www.dloiltools.com](http://www.dloiltools.com)



# RSB RETRIEVING TOOL

## FOR 9-5/8" X 7.000" X 6.000"

### DUAL RSB PACKER

Manual No: <b>DL-269-9625-1304</b>
Revision: <b>A</b>
Revision Date: <b>12/05/2019</b>

Authored by: J.Anderson

Approved by: D.Hushbeck

#### E) OPERATING PROCEDURES

**CAUTION<sub>2</sub>:** Do not run the tool without properly tightening connections. Running the tool with loose connections may damage the tool and cause malfunction.

Run the Retrieving Tool to depth and stab into the RSB packer.

The Retrieving Tool has two (2 qty) shear screws below the threaded latch that will shear at 6,800 lbs (3,400 lbs/screw). This allows the threaded latch to fully engage the top sub of the RSB Packer before the releasing collet moves downward and latches into the profile below the support ring of the RSB Packer.

##### E-1) EMERGENCY RELEASE

If the packer fails to release, apply 20,000 lbs of tension to shear the shear screws (2,000 lbs/screw) pinning the shear ring to the lower mandrel on the retrieving tool. Disengage the running tool from the packer with right-hand rotation.

#### F) STORAGE RECOMMENDATIONS

When preparing the tool for storage, follow the Pre-Installation Inspection Procedures. Re-assemble the tool with connections hand-tight only and in running position if applicable.

Store the tool, if possible, in an enclosed, temperature and humidity controlled environment. Avoid excessively high temperatures over long periods of time. Keep tool dry and protected from condensation. Do not store in contact with or near volatile or corrosive chemicals. Do not store near ozone generating equipment or operations such as welding.

#### G) RECOMMENDED TOOLS

- VISE
- GLOVES
- ALLEN WRENCHES
- TAPE MEASURE
- O-RING PICK
- BAR
  - 1/2-INCH
  - 3/4-INCH
- PAINT BRUSH, 2-INCH
- PIPE WRENCH, 3-FT (2 EA)
- "CHEATER" PIPE, 4-FT LONG
- ADJUSTABLE WRENCH, 12-INCH
- CORDLESS DRILL, 18V
- SNAP RING SPREADER PLIERS
- ALIGNING PUNCH
- SCREWDRIVER SET, FLAT-TIPPED
- SOCKET SETS
  - 3/8-INCH DRIVE
  - 1/2-INCH DRIVE
- HAMMERS
  - SLEDGE
  - BALL PEEN
  - DEAD BLOW

#### H) DISASSEMBLY

H-1) Clamp upper mandrel (2) in vise – clamp between striker nut (3) and coupling (7).

H-1.1) From lower end of tool, unscrew and remove set screws (16) from bottom cap (12).

H-1.2) Unscrew and remove bottom cap (12) from lower mandrel (8).

H-1.3) Unscrew and remove shear screws (14) from shear ring (9).

**CAUTION<sub>3</sub>:** Compression spring (11) is compressed with spring tension against shear ring (9).

H-1.4) Remove shear ring (9) from lower mandrel (8).

H-1.5) Unscrew and remove set screws (15) from both ends of coupling (7).

H-1.6) Unscrew and remove lower mandrel (8) from coupling (7).

H-1.6.1) Remove compression spring (11) and collet (10) from lower mandrel (8).

H-1.7) Unscrew and remove coupling (7) from upper mandrel (2).

H-1.8) Moving to upper end of tool, unscrew and remove set screws (16) from top sub (1).

H-1.9) Unscrew and remove top sub (1) from upper mandrel (2).

H-1.10) Unscrew and remove latch cover (6) from latch mandrel (5).

H-1.11) Remove anchor latch (4) from latch mandrel (5).



# RSB RETRIEVING TOOL

## FOR 9-5/8" X 7.000" X 6.000"

### DUAL RSB PACKER

Manual No:  
**DL-269-9625-1304**

Revision: **A**

Revision Date:  
**12/05/2019**

Authored by: *J.Anderson*

Approved by: *D.Hushbeck*

#### H) DISASSEMBLY (cont'd)

- H-1.12) Unscrew and remove shear screws (13) from latch mandrel (5).
- H-1.13) Remove latch mandrel (5) from upper mandrel (2).
- H-1.14) Unscrew and remove set screws (16) from striker nut (3).
- H-1.15) Unscrew and remove striker nut (3) from upper mandrel (2).
- H-2) Unclamp upper mandrel (2) and remove from vise.

#### I) ASSEMBLY

**NOTE:** Clean and inspect all parts. Replace all worn and damaged parts. Install parts in proper order, and orientation and tighten/torque all connections properly.

- I-1) Clamp upper mandrel (2) in vise – clamp between location of striker nut (3) and coupling (7).
  - I-1.1) From upper end of tool, screw striker nut (3) onto upper mandrel (2)
  - I-1.2) Screw set screws (16) into striker nut (3).
  - I-1.3) Install latch mandrel (5) onto upper mandrel (2). Align threaded holes in latch mandrel with shear screw groove in upper mandrel.
  - I-1.4) Screw shear screws (13) into latch mandrel (5). Tighten until shear screws (13) make contact with upper mandrel (2). Back shear screws (13) out 1/4 turn.
  - I-1.5) Install anchor latch (4) onto latch mandrel (5).
  - I-1.6) Screw latch cover (6) onto latch mandrel (5).
  - I-1.7) Screw top sub (1) onto upper mandrel (2).
  - I-1.8) Screw set screws (16) into top sub (1).
  - I-1.9) Moving to lower end of tool, screw coupling (7) onto upper mandrel (2).
  - I-1.10) Screw set screws (15) into upper end of coupling (7).
  - I-1.11) Install collet (10) and compression spring (11) onto lower mandrel (8).
  - I-1.12) Screw lower mandrel (8) into coupling (7).
  - I-1.13) Screw set screws (17) into lower end of coupling (7).
  - I-1.14) Install shear ring (9) onto lower mandrel (8). Align threaded holes in shear ring (9) with shear screw groove in lower mandrel (8).
  - I-1.15) Screw shear screws (14) into shear ring (9). Tighten until shear screws (14) make contact with lower mandrel (8). Back shear screws out 1/4 turn.

**CAUTION:** Compression spring (11) will be compressed with spring tension against shear ring (9).
  - I-1.16) Screw bottom cap (12) onto lower mandrel (8).
  - I-1.17) Screw set screws (16) into bottom cap (12).
- I-2) Unclamp upper mandrel (2) from vise and remove assembled tool.



# RSB RETRIEVING TOOL

## FOR 9-5/8" X 7.000" X 6.000"

### DUAL RSB PACKER

Manual No:  
**DL-269-9625-1304**

Revision: **A**

Revision Date:  
**12/05/2019**

Authored by: *J.Anderson*

Approved by: *D.Hushbeck*

#### J) PARTS LIST

ITEM	QTY	DESCRIPTION	MATERIAL	PART NUMBER
1	1	TOP SUB	DLMS80	26696611
2	1	UPPER MANDREL	DLMS110	26696211-2
3	1	STRIKER NUT	DLMS110	26696851
4	1	ANCHOR LATCH	DLMS110	58260003
5	1	LATCH MANDREL	DLMS110	26696861
6	1	LATCH COVER	DLMS110	26995850
7	1	MANDREL COUPLING	DLMS110	26696670
8	1	LOWER MANDREL	DLMS110	26696221
9	1	SHEAR RING	DLMS110	26696106
10	1	RELEASE COLLET	DLMS110	26696660
11	1	COMPRESSION SPRING	DLMCRSP	60073920
12	1	BOTTOM SUB	DLMS110	26696620
13	2	SLOTTED SHEAR SCREW (3400#) 3/8-16 UNC X 5/8	DLM360BRS	BSSSLT037C062
14	10	SLOTTED SHEAR SCREW (2000#) 5/16-18 UNC X 1/2	DLM360BRS	BSSSLT031C050
15	4	SOCKET SET SCREW 3/8-16 UNC X 1/2	STEEL	SSS037C050
16	8	SOCKET SET SCREW 5/16-18 UNC X 1/2	STEEL	SSS031C050

REDRESS KIT (RDK)		26995RT050
ASSEMBLED WEIGHT		219 LBS



# RSB RETRIEVING TOOL FOR 9-5/8" X 7.000" X 6.000" DUAL RSB PACKER

Manual No:  
**DL-269-9625-1304**


Revision: **A**

Revision Date:  
**12/05/2019**

Authored by: *J.Anderson*

Approved by: *D.Hushbeck*

## K) TECHNICAL ILLUSTRATION

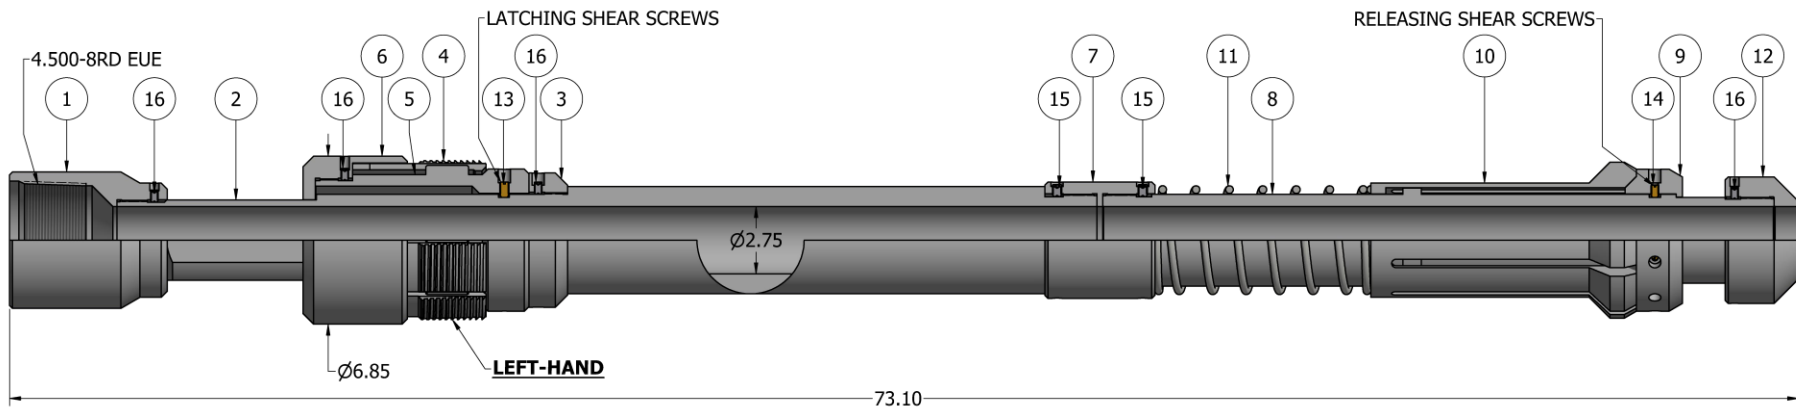

## L) REVISION HISTORY

DATE	REVISION	DESCRIPTION OF CHANGES	REVISED BY	APPROVED BY
12/05/2019	A	Created new manual	-	-