



HYDRAULIC OPEN HOLE PACKER 7-1/2" X 5-1/2"

Manual No:
DL-335-7500-1736

Revision: **A**

Revision Date:
01/26/2024

Authored by: *J.Anderson*

Approved by: *K.Plunkett*

A) DESCRIPTION

The Hydraulic Open Hole Packer is a hydraulic set, single string packer suitable for use in open hole applications. Tubing pressure is used to set the packer and the setting force is locked into the packer by a body lock ring. This packer features a double backup element system capable of holding high pressures in open hole or large ID cased holes. A large ID is maintained through the packer for increased flow potential. It is ideal for use as a tandem isolation packer between ports in a multi-stage hydraulic fracturing completion.

NOTE1: The Hydraulic Open Hole Packer is not designed to be released.

B) SPECIFICATION GUIDE

OPEN HOLE SIZE (INCHES)	RECOMMENDED SETTING RANGE (INCHES)	TOOL OD (INCHES)	TOOL ID (INCHES)	THREAD CONNECTION BOX UP / PIN DOWN	PART NUMBER
7-1/2"	7.50 – 8.25	7.350	4.75	5-1/2 BUTTRESS	33575-1

DIFFERENTIAL PRESSURE (MAX)	TENSILE RATING THRU TOOL (MAX)	TORQUE THRU TOOL (MAX)	TEMPERATURE RANGE (MIN - MAX)
10,000 PSI	250,000 LBS	5,000 FT-LBS	40 - 250°F

C) PRE-INSTALLATION INSPECTION PROCEDURES

CAUTION1: D&L ships tool connections made-up **HAND TIGHT**—labeled with hand-tight tape on the tool (Fig. 1)—unless stated otherwise. Tighten/torque all connections properly before operating tool.



Fig. 1

GENERAL THREAD CONNECTION TORQUE RECOMMENDATIONS			
STUB ACME / ACME THREADS	INTERNAL TAPERED TUBING THREADS		PREMIUM THREADS
	UP TO 2-3/8"	GREATER THAN 2-3/8"	
600 – 800 FT-LBS	600 – 800 FT-LBS	800 – 1,200 FT-LBS	Consult thread manufacturer's recommendations.

GENERAL SCREW TORQUE RECOMMENDATIONS									
SCREW SIZE (INCHES)	#6	#8	#10	1/4	5/16	3/8	7/16	1/2	5/8 and larger
TORQUE RANGE (INCH-POUNDS)	5 – 8	10 – 15	18 – 25	25 – 40	50 – 80	90 – 135	160 – 210	250 – 330	450 - 650

Before first use, D&L recommends disassembly and inspection of the tool unless stated otherwise. Ensure parts have not been damaged during shipping. Replace damaged parts with D&L replacement parts. Contact D&L sales for replacement part information.

Re-assemble the tool after inspection. Install parts in the correct order and orientation. Properly tighten connections.



HYDRAULIC OPEN HOLE PACKER 7-1/2" X 5-1/2"

Manual No:
DL-335-7500-1736

Revision: **A**

Revision Date:
01/26/2024

Authored by: *J.Anderson*

Approved by: *K.Plunkett*

D) RUNNING SEQUENCE

CAUTION₂: Do not run the tool without properly tightening connections. Running the tool with loose connections may damage the tool and cause malfunction.

Running speed is critical, especially in heavy or viscous fluid where excess speed can result in swabbing off the packing element or in creating pressure waves which could lead to creating a preset condition. It is recommended that running speed should not be more than 30 seconds per joint (range II or 30 feet). **Do not exceed this speed**, particularly when running the packer in the heaviest weight casing for the range for which the packer is dressed.

A run in the well with a junk basket and suitable sized gauge ring or a bit and scraper is strongly recommended prior to running. The location of any tight spots should be noted and the running speed for the packer through these spots should be reduced.

Being a hydraulically set packer, it can be subject to pre-set conditions by pressure waves through the fluid. A slow steady running speed should be used. Sudden stops and starts should be avoided.

Make up the packer to the tubing string in the desired position and to the required torque.

Run the packer to the desired setting depth at the recommended speed and taking precautions listed above.

- Typically the tubing/casing will be landed prior to setting.
- Establish a plug in the tubing below the packer using a drop ball, wireline plug or other device.
- Apply pressure to the tubing/casing to the recommended pressure for the given size of packer. Hold for 20 minutes.

E) SETTING AREA GUIDE

PACKER SIZE (INCHES)	SHEAR VALUE (PSI/SCREW)	SETTING AREA (SQ INCHES)	MINIMUM SETTING PRESSURE (PSI)	RECOMMENDED SETTING PRESSURE (PSI)
7-1/2	290	6.994	2,900	3,600

F) RECOMMENDED HAND TOOLS

- VISE
- GLOVES
- ALLEN WRENCHES
- TAPE MEASURE
- O-RING PICK
- BAR
 - 1/2-INCH
 - 3/4-INCH
- PAINT BRUSH, 2-INCH
- PIPE WRENCH, 3-FT (2 EA)
- "CHEATER" PIPE, 4-FT LONG
- ADJUSTABLE WRENCH, 12-INCH
- CORDLESS DRILL, 18V
- SNAP RING SPREADER PLIERS
- ALIGNING PUNCH
- SCREWDRIVER SET, FLAT-TIPPED
- SOCKET SETS
 - 3/8-INCH DRIVE
 - 1/2-INCH DRIVE
- HAMMERS
 - SLEDGE
 - BALL PEEN
 - DEAD BLOW

G) DISASSEMBLY

G-1) Clamp coupling (1) in vise.

G-1.1) Unscrew and remove bottom sub (7) from mandrel (2).

G-1.2) Remove element backups (12) and elements (10, 11) from mandrel (2)

G-1.3) Unscrew and remove and remove set screws (9) from lock ring housing (6).

G-1.4) Unscrew and remove and remove lock ring housing (6) from lock ring (8).

G-2) Unclamp and remove coupling (1) from vise. Clamp lower end of mandrel (2) in vise.

CAUTION₃: Do NOT mar or damage seal surface.

G-2.1) Unscrew and remove coupling (1) from mandrel (2).

G-2.2) Unscrew and remove shear screws (3) from shear cap (4).



HYDRAULIC OPEN HOLE PACKER 7-1/2" X 5-1/2"

Manual No:
DL-335-7500-1736

Revision: **A**

Revision Date:
01/26/2024

Authored by: J.Anderson

Approved by: K.Plunkett

G) DISASSEMBLY (cont'd)

G-2.3) Remove shear cap (4) from mandrel (2).

G-2.3.1) Remove o-ring (13) from shear cap (4).

G-2.4) Remove setting piston (5) from mandrel (2).

G-2.4.1) Remove o-rings (13, 14) from setting piston (5).

G-2.5) Unscrew and remove lock ring (8) from mandrel (2) (**NOTE**₃: Inner threads are left-hand threads).

G-3) Unclamp and remove mandrel (2) from vise

H) ASSEMBLY

NOTE₂: Clean and inspect all parts. Replace all worn and damaged parts. Install parts in proper order & orientation.

H-1) Clamp lower end of mandrel (2) in vise.

CAUTION₃: Do NOT mar or damage seal surface.

H-1.1) Screw setting piston (5) into lock ring housing (6).

H-1.2) Install lock ring (8) onto mandrel (2). Thread partially onto threads on mandrel (2) (**NOTE**₃: Inner threads are left-hand threads).

NOTE₄: Lock ring (8) MUST be installed in proper direction (Fig. 1).

H-1.2.1) Install o-rings (13, 14) in setting piston (5).

H-1.3) Install setting piston (5) onto mandrel (2).

CAUTION₄: Do NOT rip or tear o-ring(s) while installing.

H-1.4) Install o-ring (13) in groove in shear cap (4).

H-1.5) Install shear cap (4) onto setting piston (5). Align threaded holes in shear cap (4) with shear screw groove in setting piston (5).

CAUTION₄: Do NOT rip or tear o-ring(s) while installing.

H-1.6) Screw shear screws (3) into shear cap (4). Tighten until screws (3) contact setting piston (5). Back out 1/4 turn.

H-1.7) Screw coupling (1) onto mandrel (2).

H-2) Unclamp and remove mandrel (2) from vise. Clamp coupling (1) in vise.

H-2.1) Screw lock ring housing onto lock ring (8). Align gap in lock ring (8) with threaded holes in lock ring housing (6).

H-2.2) Screw set screws (9) into lock ring housing (6).

CAUTION₅: Do not tighten socket set screws (9) on mandrel (2) threads.

H-2.3) Install elements (10, 11) and element backups (12) onto mandrel (2).

H-2.4) Screw bottom sub (7) onto mandrel (2).

H-3) Unclamp and remove assembly from vise.

 


Fig. 1



HYDRAULIC OPEN HOLE PACKER 7-1/2" X 5-1/2"

Manual No:
DL-335-7500-1736

Revision: **A**

Revision Date:
01/26/2024

Authored by: *J.Anderson*

Approved by: *K.Plunkett*

I) PARTS LIST

ITEM	QTY	DESCRIPTION	MATERIAL	PART NUMBER
1	1	COUPLING	DLMS110	CP-BLC-C
2	1	MANDREL	DLMS110	33580211
3	10	5/16-18 UNC X 3/8 SLOTTED SHEAR SCREW (2000#)	DLM360BRS	BSSSLT031C037
4	1	SHEAR CAP	DLMS110	33580741
5	1	SETTING PISTON	DLMS110	33580751
6	1	LOCK RING HOUSING	DLMS110	33575013
7	1	BOTTOM SUB	DLSM110	33575631
8	1	LOCK RING	DLMS41X80	33580011
9	2	#10-32 UNF X 1/2 SOCKET SET SCREW	STEEL	SSS1032F050
10	1	ELEMENT	80 DURO NITRILE	33575522
11	2	ELEMENT	90 DURO NITRILE	33575515
12	2	ELEMENT BACK UP	90 DURO NITRILE/MESH	33575516
13	2	257 O-RING	90 DURO NITRILE	90257
14	1	259 O-RING	90 DURO NITRILE	90259

ASSEMBLED WEIGHT	266 LBS
------------------	---------



HYDRAULIC OPEN HOLE PACKER

7-1/2" X 5-1/2"

Manual No:
DL-335-7500-1736


Revision: A

Revision Date:
01/26/2024

Authored by: J.Anderson

Approved by: K.Plunkett

J) TECHNICAL ILLUSTRATION

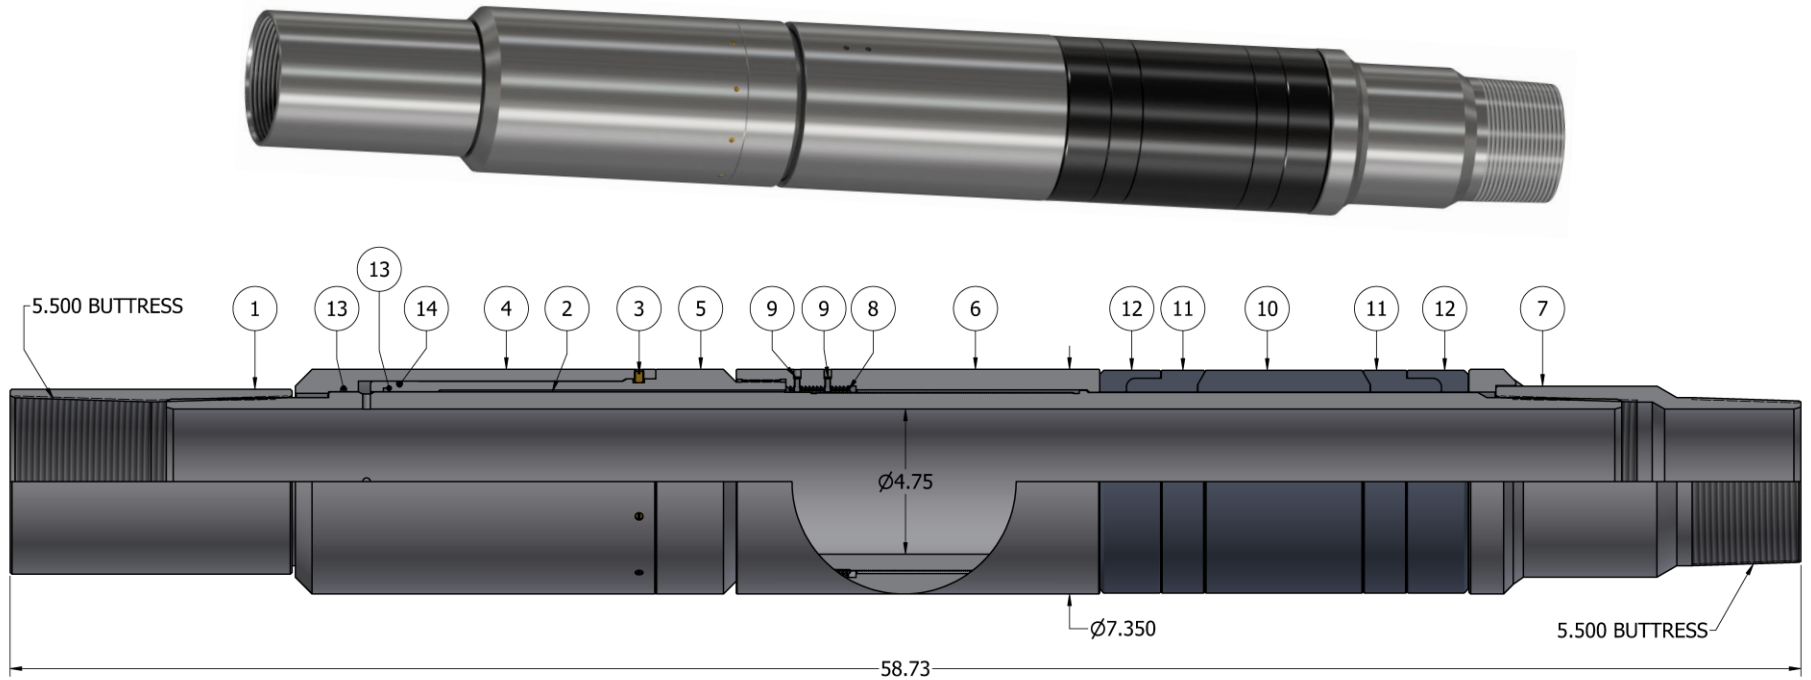

K) REVISION HISTORY

DATE	REVISION	DESCRIPTION OF CHANGES	REVISED BY	APPROVED BY
01/26/2024	A	Created manual	-	-