



# AS RETRIEVABLE BRIDGE PLUG

## RIGHT-HAND SET / RIGHT-HAND RELEASE

### 6-5/8" W/ 2-3/8" EUE (PIN DOWN)

Manual No:  
**DL-725-6625-242**

Revision: **G**

Revision Date:  
**11/30/2023**

Authored by: S. White

Approved by: H. Bringham

## A) DESCRIPTION

The AS Retrievable Bridge Plug is a high pressure plug for multiple zone and selective single zone operations such as acidizing, fracturing, cementing, and testing. It features a large internal by-pass to reduce swabbing when running and retrieving. The by-pass closes during the setting of the plug and opens prior to releasing the upper slips to equalize pressure when unsetting. The by-pass is located directly below the upper slips to help wash debris when the by-pass is open.

This tool can be set in tension and compression. It can be set shallow in unsupported casing to contain pressure while working on wellhead equipment. It can be set in tension making it ideal for setting shallow to test wellhead equipment and also deep, high pressure wells.

The ASW Retrievable Bridge Plug is a version of the AS Retrievable Bridge Plug that allows the plug to be set on wireline or with a hydraulic setting tool and retrieved with tubing. It cannot be reset in the wellbore once it is unset, but it can be pulled, re-dressed and run again. A Wireline Adapter Kit is required for this version.

**CAUTION<sub>1</sub>:** When running this tool with a packer, make sure the J-slots in the plug, running/ retrieving tool, and packer are all compatible.

## B) RELATED TOOLS (sold separately)

B-1) 6-5/8" X 2-7/8" Spring Loaded Retrieving Tool (P/N 57765) – refer to technical manual *DL-577-6625-239*.

## C) SPECIFICATION GUIDE

CASING			TOOL	THREAD CONNECTION PIN DOWN	PART NUMBER
SIZE (INCHES)	WEIGHT (LBS/FT)	RECOMMENDED HOLE SIZE (INCHES)	GAGE OD (INCHES)		
6-5/8	17.0 – 24.0	5.921 – 6.135	5.750	2-3/8 EUE	72567RR 72567RRH <sup>1</sup> 72567RRV <sup>2</sup>

Elastomer Trim Options: <sup>1</sup>HSN, <sup>2</sup>Viton

**NOTE<sub>1</sub>:** Tool listed is right-hand set / right-hand release. Additional J-slot designs are available.

**NOTE<sub>3</sub>:** Tool listed can also be set in 7" (35.0 – 38.0#) casing.

DIFFERENTIAL PRESSURE (MAX)	HANGING WEIGHT ON SET TOOL (MAX)	TENSILE LOAD THRU TOOL (MAX)	TORQUE THRU TOOL (MAX)
10,000 PSI	100,000 LBS <sup>†</sup>	100,000 LBS	2,000 FT-LBS

<sup>†</sup>Casing must be cemented for this load rating.

D & L OIL TOOLS  
P.O. BOX 52220 TULSA, OK 74152  
PHONE: (800) 441-3504 [www.dloiltools.com](http://www.dloiltools.com)



# AS RETRIEVABLE BRIDGE PLUG

## RIGHT-HAND SET / RIGHT-HAND RELEASE

### 6-5/8" W/ 2-3/8" EUE (PIN DOWN)

Manual No:  
**DL-725-6625-242**

Revision: **G**

Revision Date:  
**11/30/2023**

Authored by: S. White

Approved by: H. Bringham

## D) PRE-INSTALLATION INSPECTION PROCEDURES

**CAUTION<sub>2</sub>:** D&L ships tool connections made-up HAND TIGHT—labeled with hand-tight tape on the tool (Fig. 1)—unless stated otherwise. Tighten/torque all connections properly before operating tool.

Fig. 1



GENERAL THREAD CONNECTION TORQUE RECOMMENDATIONS			
STUB ACME / ACME THREADS	INTERNAL TAPERED TUBING THREADS		PREMIUM THREADS
	UP TO 2-3/8"	GREATER THAN 2-3/8"	
600 – 800 FT-LBS	600 – 800 FT-LBS	800 – 1,200 FT-LBS	Consult thread manufacturer's recommendations.

GENERAL SCREW TORQUE RECOMMENDATIONS									
SCREW SIZE (INCHES)	#6	#8	#10	1/4	5/16	3/8	7/16	1/2	5/8 and larger
TORQUE RANGE (INCH-POUNDS)	5 – 8	10 – 15	18 – 25	25 – 40	50 – 80	90 – 135	160 – 210	250 – 330	450 - 650

Before first use, D&L recommends disassembly and inspection of the tool unless stated otherwise. Ensure parts have not been damaged during shipping. Replace damaged parts with D&L replacement parts. Contact D&L sales for replacement part information.

Re-assemble the tool after inspection. Install parts in the correct order and orientation. Properly tighten connections.

Before re-using the tool, D&L recommends disassembly and inspection of the tool. Clean parts and ensure parts are in good working condition. Replace worn or damaged parts with D&L replacement parts.

When redressing the tool, D&L recommends replacement of all seals, elements, o-rings, shear screws, etc. Contact D&L sales for redress kit and/or other replacement part information.

## E) SETTING PROCEDURES

**CAUTION<sub>3</sub>:** Do not run the tool without properly tightening connections. Running the tool with loose connections may damage the tool and cause malfunction.

**CAUTION<sub>4</sub>:** Lift the AS Retrievable Bridge Plug by placing the sling or chain just below the pulling head. **DO NOT** lift the bridge plug by the upper slip body assembly (Fig. 2).



Fig. 2

### E-1) TENSION SET

Run to setting depth while latched to its spring loaded retrieving tool. Pick up, rotate 1/4 turn to the right at the plug, and lower tubing to set lower slips. Pull tension to pack-off elements, slack off, and then pick up again to assure plug setting (14,000 lbs minimum). After setting plug, slack off tubing weight, hold left-hand torque and pick up to free tubing from plug.

### E-2) COMPRESSION SET

Run to setting depth while latched to its spring-loaded retrieving tool. Pick up, rotate 1/4 turn to the right at the plug, and lower tubing to set lower slips. Slack off sufficient weight to pack-off elements, then pick up to firmly set upper slips and slack off again (14,000 lbs minimum). After setting plug, slack off tubing weight, hold left-hand torque and pick up the free tubing from plug.



# AS RETRIEVABLE BRIDGE PLUG

## RIGHT-HAND SET / RIGHT-HAND RELEASE

### 6-5/8" W/ 2-3/8" EUE (PIN DOWN)

Manual No:  
**DL-725-6625-242**

Revision: **G**

Revision Date:  
**11/30/2023**

Authored by: S. White

Approved by: H. Bringham

## F) RELEASING PROCEDURES

Lower tubing until the retrieving tool automatically latches to the AS Retrievable Bridge Plug. Sand may be washed from the upper slip by circulating through the upper portion of the plug. Slack off weight, hold right-hand torque pick up to open the by-pass valve, and wait until differential pressure has equalized. Continue upward movement to release upper slips, relax packing elements and re-latch. The plug may now be removed or re-located.

### F-1) EMERGENCY RELEASE

If the plug will not release conventionally, slack off re-set, then pick straight up to shear J-pins and release the plug (standard J-pins will shear at 40,000 lbs each – refer to Parts List for J-pins with other shear values) Once the J-pins are sheared, the tool cannot be moved down hole.

**NOTE<sub>2</sub>:** Most of the component parts are manufactured from heat-treated alloy steel. Therefore, extended exposure to corrosives can be detrimental to the metallurgy. Care in cleaning the tool soon after removal from the well can help extend the life of component parts. After removal, close inspection of the parts is necessary to identify any parts which require replacement.

## G) STORAGE RECOMMENDATIONS

When preparing the tool for storage, follow the Pre-Installation Inspection Procedures. Re-assemble the tool with connections hand-tight only and in running position if applicable. Elements should be in a relaxed state—free from tension, compression, and other stresses that could cause deformation.

Store the tool, if possible, in an enclosed, temperature and humidity controlled environment. Avoid excessively high temperatures over long periods of time. Shield elastomeric parts from ultraviolet light sources. Keep tool dry and protected from condensation. Do not store in contact with or near volatile or corrosive chemicals. Do not store near ozone generating equipment or operations such as welding.

## H) ELASTOMER TRIM TEMPERATURE GUIDE

NITRILE (STD)			
TEMPERATURE RANGE (F°)	DUROMETER		
	END	MIDDLE	END
40° - 125°	80	70	80
125° - 250°	90	70	90
150° - 250°	90	80	90
250° +	Contact D&L Sales		

RUBBER TYPE	TEMPERATURE RANGE (F°)
NITRILE	40° - 250°F
HSN (HNBR)	70° - 300°F
VITON	100° - 350°F



# AS RETRIEVABLE BRIDGE PLUG

## RIGHT-HAND SET / RIGHT-HAND RELEASE

### 6-5/8" W/ 2-3/8" EUE (PIN DOWN)

Manual No:  
**DL-725-6625-242**

Revision: **G**

Revision Date:  
**11/30/2023**

Authored by: S. White

Approved by: H. Bringham

## I) RECOMMENDED TOOLS

### I-1) HAND TOOLS

- VISE
- GLOVES
- ALLEN WRENCHES
- TAPE MEASURE
- O-RING PICK
- BAR
  - 1/2-INCH
  - 3/4-INCH
- PAINT BRUSH, 2-INCH
- PIPE WRENCH, 3-FT (2 EA)
- "CHEATER" PIPE, 4-FT LONG
- ADJUSTABLE WRENCH, 12-INCH
- CORDLESS DRILL, 18V
- SNAP RING SPREADER PLIERS
- ALIGNING PUNCH
- SCREWDRIVER SET, FLAT-TIPPED
- SOCKET SETS
  - 3/8-INCH DRIVE
  - 1/2-INCH DRIVE
- HAMMERS
  - SLEDGE
  - BALL PEEN
  - DEAD BLOW

### I-2) SPECIAL TOOLS

ITEM	QTY	DESCRIPTION	PART NUMBER
T1	1	DRAG BLOCK ASSEMBLY TOOL	AT070110

## J) DISASSEMBLY

J-1) Clamp center coupling (10) in vise.

**NOTE<sub>3</sub>:** If needed, align hole in upper cone (9) with slot in sealing mandrel (27) and insert punch (or other tool) to prevent tool components from rotating during disassembly.

J-1.1) Unscrew and remove set screws (37) from lower end of body extension (28).

J-1.2) Unscrew and separate body extension (28) from J-pin body (23) (**NOTE<sub>4</sub>:** Left-hand threads).

**NOTE<sub>5</sub>:** Drag block body assembly must be free to rotate.

J-1.3) Remove J-pins (15) from J-pin body (23).

J-1.4) Remove J-pin body (23) from J-slot mandrel (20).

J-1.5) Compress drag blocks (22) with drag block body assembly tool (T1). Unscrew and remove set screws (35) from drag block body (18). Rotate drag block retainer (21) as needed.

J-1.6) Unscrew and remove body extension (28) from drag block body (18) (**NOTE<sub>4</sub>:** Left-hand threads).

J-1.6.1) Remove retaining ring (31) from body extension (28).

J-1.7) Remove drag block retainer (21) from drag block body (18).

J-1.8) Release drag blocks (22). Remove drag blocks (22) and drag block springs (3) from drag block body (18).

J-1.9) Unscrew and remove rubber mandrel cap (19) from lower slip sleeve (32).

J-1.10) Wedge lower slips (17) outward (if needed). Remove drag block body assembly and disassemble:

J-1.10.1) Remove wedges (if needed). Remove lower slips (17) and lower slip springs (25) from drag block body (18).

J-1.11) Unscrew and remove set screws (36) from lower slip sleeve (32).

J-1.12) Unscrew and remove lower slip sleeve (32) from rubber mandrel (11).

J-1.13) Unscrew and remove set screws (36) from J-slot mandrel (20).

J-1.14) Unscrew and remove J-slot mandrel (20) from sealing mandrel (27).

J-1.15) Unscrew rubber mandrel (11) from center coupling (10).

J-1.16) Remove rubber mandrel assembly and disassemble:

J-1.16.1) Remove elements (13, 14), rubber spacers (12), and lower cone (16) from rubber mandrel (11).

J-1.17) Unscrew and remove gage ring (29) from center coupling (10).

J-1.18) Moving to upper end of tool, unscrew and remove set screws (37) from pulling head (1).



# AS RETRIEVABLE BRIDGE PLUG

## RIGHT-HAND SET / RIGHT-HAND RELEASE

### 6-5/8" W/ 2-3/8" EUE (PIN DOWN)

Manual No:  
**DL-725-6625-242**

Revision: **G**

Revision Date:  
**11/30/2023**

Authored by: S. White

Approved by: H. Bringham

## J) DISASSEMBLY (cont'd)

J-1.19) Unscrew and remove pulling head (1) from upper mandrel (2).

**CAUTIONs:** Compression spring (4) is compressed with spring tension against pulling head (1).

J-1.19.1) Unscrew and remove spring retaining ring (34) from pulling head (1).

J-1.20) Remove compression spring (4) from upper mandrel (2).

J-1.21) Wedge releasing slips (7) and upper slips (8) outward (if needed). Remove upper slip body assembly and disassemble:

J-1.21.1) Unscrew and remove upper slip pickup (33) from upper slip body (6).

J-1.21.2) Remove wedges (if needed). Remove releasing slips (7), upper slips (8), and upper slip springs (26) from upper slip body (6).

J-1.22) Unscrew and remove set screws (36) from upper mandrel (2).

J-1.23) Unscrew and remove upper mandrel (2) from sealing mandrel (27).

J-1.24) Remove plug (5) from sealing mandrel (27).

J-1.24.1) Remove o-ring (41) from plug (5).

J-1.25) Remove sealing mandrel (27) from center coupling (10).

J-1.26) Unscrew and remove set screws (36) from upper cone (9).

J-1.27) Unscrew and remove upper cone (9) from center coupling (10).

J-1.27.1) Remove seal retaining ring (30) from upper cone (9).

J-2) Unclamp and remove center coupling (10) from vise.

J-2.1) Remove bonded seals (24) and internal ring (38) from center coupling (10).

J-2.1.1) Remove o-rings (39) from bonded seals (24).

J-2.2) Remove o-ring (40) from center coupling (10).

**NOTE<sub>6</sub>:** To redress tool assembly, follow disassembly instructions. It is recommended by D&L Oil Tools to replace all bonded seals, elements, o-rings, shear screws, etc. when redressing tool.

## K) ASSEMBLY

**NOTE<sub>8</sub>:** Clean and inspect all parts. Replace all worn and damaged parts. Install parts in proper order, and orientation and tighten/torque all connections properly.

**CAUTION<sub>6</sub>:** To ensure tool operates properly, install o-rings in o-ring grooves **NOT** thread reliefs (Fig. 3).

K-1) Install o-ring (40) in groove in center coupling (10).

K-2) Install o-rings (39) in grooves in bonded seals (24).

K-3) Install bonded seals (24) and internal ring (38) in center coupling (10).

**CAUTION<sub>6</sub>:** Do not rip or tear o-rings during installation.

K-4) Clamp center coupling (10) in vise.

K-4.1) Install seal retaining ring (30) in upper cone (9).

K-4.2) Screw upper cone (9) onto center coupling (10).

K-4.3) Screw set screws (36) into upper cone (9).

K-4.4) Install sealing mandrel (27) through bonded seals in center coupling (10).

**CAUTION<sub>7</sub>:** Do not damage bonded seals during installation.

K-4.5) Install o-ring (41) in groove in plug (5).

K-4.6) Install plug (5) into end of sealing mandrel (27).

**CAUTION<sub>6</sub>:** Do not rip or tear o-ring during installation.

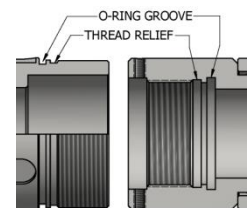


Fig. 3



# AS RETRIEVABLE BRIDGE PLUG

## RIGHT-HAND SET / RIGHT-HAND RELEASE

### 6-5/8" W/ 2-3/8" EUE (PIN DOWN)

Manual No:  
**DL-725-6625-242**

Revision: **G**

Revision Date:  
**11/30/2023**

Authored by: S. White

Approved by: H. Bringham

#### K) ASSEMBLY (cont'd)

K-4.7) Screw upper mandrel (2) onto sealing mandrel (27).

**NOTE<sub>3</sub>:** If needed align hole in upper cone (9) with slot in sealing mandrel (27) and insert punch (or other tool) to prevent tool components from rotating during assembly.

K-4.8) Screw set screws (36) into upper mandrel (2).

K-4.9) Assemble upper slip body assembly and install:

K-4.9.1) Screw upper slip pickup (33) into upper slip body (6).

K-4.9.2) Install releasing slips (7), upper slips (8) and upper slip springs (26) into upper slip body (6).

**NOTE<sub>8</sub>:** Install one (1ea) spring per slip (Fig. 4).

K-4.9.3) Wedge slips outward. Install upper slip body assembly onto upper mandrel (2). Remove wedges.

K-4.10) Install compression spring (4) onto upper mandrel (2).

K-4.11) Screw spring retaining ring (34) onto pulling head (1).

K-4.12) Screw pulling head (1) onto upper mandrel (2).

**CAUTION<sub>5</sub>:** Compression spring (4) will be compressed with spring tension against pulling head (1).

K-4.13) Screw set screws (37) into pulling head (1).

K-4.14) Moving to lower end of tool, screw gage ring (29) onto center coupling (10).

K-4.15) Assemble rubber mandrel assembly and install:

K-4.15.1) Install elements (13, 14), rubber spacers (12), and lower cone (16) onto rubber mandrel (11).

K-4.15.2) Install rubber mandrel assembly onto sealing mandrel (27).

K-4.16) Screw rubber mandrel (11) into center coupling (10)

K-4.17) Screw J-slot mandrel (20) onto sealing mandrel (27).

K-4.18) Screw set screws (36) into J-slot mandrel (20).

K-4.19) Screw lower slip sleeve (32) onto rubber mandrel (11).

K-4.20) Screw set screws (36) into lower slip sleeve (32).

K-4.21) Assemble drag block body assembly and install:

K-4.21.1) Install lower slips (17) and lower slip springs (25) into drag block body (18). Wedge slips outward.

**NOTE<sub>9</sub>:** Install one (1ea) spring per slip (Fig. 5).

K-4.21.2) Install drag block body assembly onto lower slip sleeve (32). Remove wedges.

K-4.22) Screw rubber mandrel cap (19) onto lower slip sleeve (32).

K-4.23) Install drag blocks (22) and drag block springs (3) into drag block body (18). Compress drag blocks (22) with drag block body assembly tool (T1).

**NOTE<sub>10</sub>:** Install six (6ea) springs per drag block (Fig. 6).

K-4.24) Install drag block retainer (21) onto drag block body (18) capturing ends of drag blocks (22).

K-4.25) Install retaining ring (31) onto body extension (28).

K-4.26) Screw body extension (28) into drag block body (18) (**NOTE<sub>4</sub>:** Left-hand threads). Move drag block retainer (21) as necessary to access threaded holes in drag block body (18).

K-4.27) Screw set screws (35) into drag block body (18). Release drag blocks (22).

K-4.28) Install J-pin body (23) onto J-slot mandrel (20).



Fig. 4



Fig. 5



Fig. 6



# AS RETRIEVABLE BRIDGE PLUG

## RIGHT-HAND SET / RIGHT-HAND RELEASE

### 6-5/8" W/ 2-3/8" EUE (PIN DOWN)

Manual No:  
**DL-725-6625-242**

Revision: **G**

Revision Date:  
**11/30/2023**

Authored by: S. White

Approved by: H. Bringham

## K) ASSEMBLY (cont'd)

Fig. 7



K-4.29) Align holes in J-pin body (23) with lower tension shoulder of J-slot mandrel (20). Install J-pins (15) into J-pin body (23) (Fig. 7).

K-4.30) Slide drag block body assembly down and screw body extension (28) onto J-pin body (23) (**NOTE4:** Left-hand threads).

**NOTE5:** Drag block body assembly must be free to rotate.

K-4.31) Screw set screws (37) into body extension (28).

K-5) Unclamp center coupling (10) from vise and remove assembled tool.

## L) PARTS LIST

ITEM	QTY	DESCRIPTION	MATERIAL	P/N 72567RR
1	1	PULLING HEAD	DLMS110	72570710
2	1	UPPER MANDREL	DLMS110	72570212
3	24	DRAG BLOCK SPRING	-	9101900
4	1	COMPRESSION SPRING	DLMCRSP	72570920
5	1	PLUG	DLMS110	72570216
6	1	UPPER SLIP BODY	DLMS80	72567320
7	2	RELEASING SLIP	DLMS110	72567125
8	2	UPPER SLIP W/ CARBIDE	DLMS110	72567115C
9	1	UPPER CONE	DLMS110	72570411
10	1	CENTER COUPLING	DLMS110	72570620
11	1	RUBBER MANDREL	DLMS110	72570220
12	2	RUBBER SPACER	DLMS35	72567840
13	1	ELEMENT	70 DURO NITRILE	72067511
14	2	ELEMENT	90 DURO NITRILE	72067513
15	2	J-PIN <b>NOTE11:</b> Shear value is stamped on J-pin.	DLMS110	72570870-25 (25,000#)
				72570870-30 (30,000#)
				72570870-35 (35,000#)
				72570870-40 (STD 40,000#)





# AS RETRIEVABLE BRIDGE PLUG

## RIGHT-HAND SET / RIGHT-HAND RELEASE

### 6-5/8" W/ 2-3/8" EUE (PIN DOWN)

Manual No:  
**DL-725-6625-242**

Revision: **G**

Revision Date:  
**11/30/2023**

Authored by: S. White

Approved by: H. Bringham

#### L) PARTS LIST (cont'd)

ITEM	QTY	DESCRIPTION	MATERIAL	P/N 72567RR
16	1	LOWER CONE	DLMS110	72567420
17	4	LOWER SLIP W/ CARBIDE	DLMS110	60065135C
18	1	DRAG BLOCK BODY	DLMS80	60067335
19	1	RUBBER MANDREL CAP	DLMS60	60070230
20	1	J-SLOT MANDREL	DLMS110	72570230
21	1	DRAG BLOCK RETAINER	DLMS60	60067910
22	4	DRAG BLOCK W/ CARBIDE	DLMSDB4	9060900C
23	1	J-PIN BODY	DLMS110	72570875
24	2	BONDED SEAL	90 DURO NITRILE	60045520
25	4	LOWER SLIP SPRING	-	7170901
26	4	UPPER SLIP SPRING	-	DL94830
27	1	SEALING MANDREL	DLMS110	72570214
28	1	BODY EXTENSION	DLMS110	72570370
29	1	GAGE RING	DLMS60	72567830
30	1	SEAL RETAINING RING	DLMS110	72570225
31	1	RETAINING RING	DLMS60	60070911
32	1	LOWER SLIP SLEEVE	DLMS110	72570912
33	1	UPPER SLIP PICKUP	DLMS110	72567345
34	1	SPRING RETAINING RING	DLMS110	72570820
35	3	SET SCREW 5/16-18 UNC X 1/2	STEEL	SSS031C050
36	12	SET SCREW 3/8-16 UNC X 3/8	STEEL	SSS037C037
37	6	SET SCREW 3/8-16 UNC X 1/2	STEEL	SSS037C050
38	1	SMALLEY MEDIUM DUTY INTERNAL RING	DLMSC	WHM-275
39	2	145 O-RING	90 DURO NITRILE	90145
40	1	234 O-RING	90 DURO NITRILE	90234
41	1	322 O-RING	90 DURO NITRILE	90322

REDRESS KIT (RDK)		72567050
ASSEMBLED WEIGHT		321 LBS





# AS RETRIEVABLE BRIDGE PLUG

## RIGHT-HAND SET / RIGHT-HAND RELEASE

### 6-5/8" W/ 2-3/8" EUE (PIN DOWN)

Manual No:  
**DL-725-6625-242**

Revision: **G**

Revision Date:  
**11/30/2023**

Authored by: S. White

Approved by: H. Bringham

## L) PARTS LIST (cont'd)

### L-1) ELASTOMER TRIM OPTIONS

**NOTE15:** For temperature range, refer to Elastomer Trim Temperature Guide.

#### L-1.1) HSN

ITEM	QTY	DESCRIPTION	MATERIAL	P/N 72567RRH
13	1	ELEMENT	70 DURO HSN	72067511H
14	2	ELEMENT	90 DURO HSN	72067513H
24	2	BONDED SEAL	90 DURO HSN	60045520H
39	2	145 O-RING	90 DURO HSN	90145H
40	1	234 O-RING	90 DURO HSN	90234H
41	1	322 O-RING	90 DURO HSN	90322H

REDRESS KIT (RDK)		72567050H
-------------------	--	-----------

#### L-1.2) VITON

ITEM	QTY	DESCRIPTION	MATERIAL	P/N 72567RRV
13	1	ELEMENT	70 DURO VITON	72067511V
14	2	ELEMENT	90 DURO VITON	72067513V
24	2	BONDED SEAL	90 DURO VITON	60045520V
39	2	145 O-RING	90 DURO VITON	90145V
40	1	234 O-RING	90 DURO VITON	90234V
41	1	322 O-RING	90 DURO VITON	90322V

REDRESS KIT (RDK)		72567050V
-------------------	--	-----------



# AS RETRIEVABLE BRIDGE PLUG

## RIGHT-HAND SET / RIGHT-HAND RELEASE

6-5/8" W/ 2-3/8" EUE (PIN DOWN)

Manual No:  
**DL-725-6625-242**


Revision: **G**

Revision Date:  
**11/30/2023**

Authored by: S. White

Approved by: H. Bringham

### M) TECHNICAL ILLUSTRATION

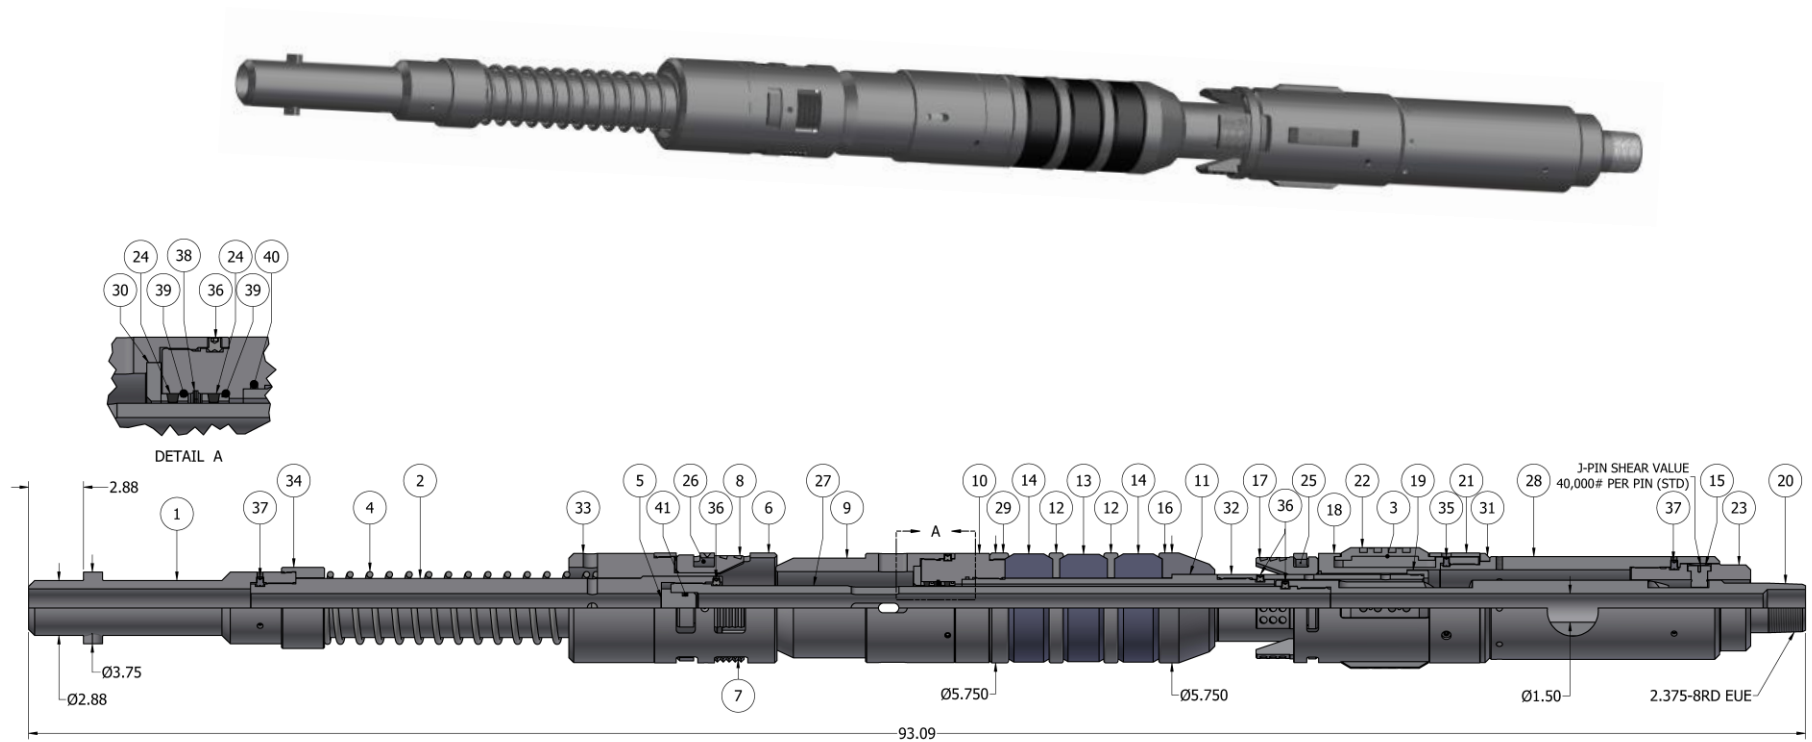

	<b>AS RETRIEVABLE BRIDGE PLUG</b> <b>RIGHT-HAND SET / RIGHT-HAND RELEASE</b> <b>6-5/8” W/ 2-3/8” EUE (PIN DOWN)</b>	Manual No: <b>DL-725-6625-242</b>
		Revision: <b>G</b>
		Revision Date: <b>11/30/2023</b>
<i>Authored by: S. White</i>		<i>Approved by: H. Bringham</i>

## N) REVISION HISTORY

DATE	REVISION	DESCRIPTION OF CHANGES	REVISED BY	APPROVED BY
11/30/2023	G	Revised SSS037C037 qty 12 was 6, WHM-275 was WH-275; Removed SSS037C025	J.Anderson	E.Visaez
11/18/2020	F	Revised 9101900 was 9100900; Added General Screw Torque Recommendations	J.Anderson	E.Visaez
12/08/2015	E	Revised Elastomer Durometer Temperatures – Nitrile (90/80/90 Duro) was 250° - 300°F, Nitrile (Contact D&L Sales) was 300°F +, Rubber Type Temperature Ranges – Nitrile was 70° - 300°F, HSN was 70° - 325°F; Added max. torque thru tool, max. hanging weight on set tool, max. tensile load thru tool	J.Anderson	K.Riggs
04/11/14	D	Added Related Tools, HSN and Viton options (P/N 72567RRH, 72567RRV), max. differential pressure, Pre-Installation Inspection Procedures, caution for tightening connections, caution for lifting plug, Storage Procedures, Element Selection Guide, Recommended Tools, Options Parts List, Revision History	S. McEntire	K. Riggs