



# ASI-X HT PACKER

## 7-5/8" X 3-1/2"

Manual No:  
**DL-603-7625-122**

Revision: **D**

Revision Date:  
**02/11/2015**

Authored by: S.White

Approved by: J.McArthur

### A) DESCRIPTION

The ASI-X HT Single String Double-Grip Production Packer is the most versatile of the mechanically set retrievable packers and may be used in any production application. This packer is suited for treating, testing, or injection applications, in pumping or flowing wells, either deep or shallow. This packer can be left in tension or compression depending on well conditions and the required application.

A large internal by-pass reduces swabbing when running and retrieving. The by-pass closes when the packer is set and opens prior to releasing the upper slips when retrieving to allow pressure equalization. The J-slot design allows easy setting and releasing; 1/4 turn right-hand set, 1/4 turn right-hand release.

The ASI-X HT Packer is designed for differential pressures up to 10,000 PSI (unless noted otherwise). The HT version allows this packer to be utilized in completions where high pressure treating operations are performed and it is desirable to leave the tool in the well for production.

### B) RELATED TOOLS (sold separately)

B-1) 3-1/2" DT-2 On/Off Tool - refer to technical manual *DL-512-3500-131*.

B-2) 3-1/2" Stinger - actual P/N varies depending on customer requirements.

### C) SPECIFICATION GUIDE

CASING			TOOL			THREAD CONNECTION BOX UP / PIN DOWN	PART NUMBER
SIZE (INCHES)	WEIGHT (LBS/FT)	RECOMMENDED HOLE SIZE (INCHES)	GAGE OD (INCHES)	NOMINAL ID (INCHES)	DRIFT ID (INCHES)		
7-5/8	24.0 - 29.7#	6.875 – 7.025	6.672	3.00	2.867	3-1/2 EUE	60378HT 60378HTH <sup>1</sup> 60378HTV <sup>2</sup>
	33.7 - 39.0#	6.625 – 6.765	6.453	3.00	2.867	3-1/2 EUE	60377HT 60377HTH <sup>1</sup> 60377HTV <sup>2</sup>

Elastomer Trim Options: HSN<sup>1</sup> Viton<sup>2</sup>

**NOTE<sub>1</sub>:** Tools listed are right-hand set / right-hand release.

**NOTE<sub>2</sub>:** Use of a Double Hook J-slot Packer is recommended when running with a pumpjack to help prevent the packer from unsetting during well production.

DIFFERENTIAL PRESSURE (MAX)	TENSILE LOAD THRU TOOL (MAX)
10,000 PSI	148,000 LBS

D & L OIL TOOLS  
P.O. BOX 52220 TULSA, OK 74152  
PHONE: (800) 441-3504 [www.dloiltools.com](http://www.dloiltools.com)



# ASI-X HT PACKER

## 7-5/8" X 3-1/2"

Manual No:  
**DL-603-7625-122**

Revision: **D**

Revision Date:  
**02/11/2015**

Authored by: S.White

Approved by: J.McArthur

### D) PRE-INSTALLATION INSPECTION PROCEDURES

**CAUTION<sub>1</sub>:** D&L ships tool connections made-up **HAND TIGHT**—labeled with hand-tight tape on the tool (Fig. 1) — unless stated otherwise. Tighten/torque all connections properly before operating tool.

Fig. 1



GENERAL THREAD CONNECTION TORQUE RECOMMENDATIONS			
STUB ACME / ACME THREADS	INTERNAL TAPERED TUBING THREADS		PREMIUM THREADS
	UP TO 2-3/8"	GREATER THAN 2-3/8"	
600 – 800 FT-LBS	600 – 800 FT-LBS	800 – 1,200 FT-LBS	Consult thread manufacturer's recommendations.

Before first use, D&L recommends disassembly and inspection of the tools unless stated otherwise. Ensure parts have not been damaged during shipping. Replace damaged parts with D&L replacement parts. Contact D&L sales for replacement part information.

Before re-using the tool, D&L recommends disassembly and inspection of the tool. Clean parts and ensure parts are in good working condition. Replace worn or damaged parts with D&L replacement parts.

When redressing the tool, D&L recommends replacement of all seals, elements, o-rings, shear screws, etc. Contact D&L sales for redress kit and/or other part information.

### E) SETTING PROCEDURES

**CAUTION<sub>2</sub>:** Do not run the tool without properly tightening connections. Running the tool with loose connections may damage the tool and cause malfunction.

#### E-1) COMPRESSION SET

Run the packer to setting depth. Pick up the work string to allow for setting stroke (12-13") plus desired work string load. Rotate the work string 1/4 right-hand turn at the packer, and then lower the work string while releasing torque. Slack off on the work string sufficient weight to set the packer (16,000 lbs minimum). Pull tension to assure that the upper slips are set. The work string can then be left in tension, compression or neutral. If insufficient weight is available to set the packer with compression, tension can be applied after slack-off to pack off the elements.

#### E-2) TENSION SET

Run to setting depth, pick up on the work string and rotate 1/4 turn to the right at the packer then lower the work string slacking off available weight to set the packer lower slips. Pull tension to set upper slips and pack off elements (16,000 lbs minimum). After setting the packer, the work string can be left in compression, tension or neutral.

### F) RELEASING PROCEDURES

The releasing procedures are the same whether the packer has been tension or compression set. Set down weight on the packer to unseat the J-pin from the tension shoulder of the J-slot. Refer to the Pressure Affected Area Guide to determine necessary set-down weight on the packer. Rotate the work string 1/4 right-hand turn at the packer and pick up while holding right-hand torque. Weight in addition to pipe weight may be required to pick up on packer - refer to Pressure Affected Area Guide. The internal by-pass will open, allowing pressure to equalize. After pressure is equalized, continue to pick up to release the upper slips, relax the elements and release the lower slips thus allowing the packer to be re-set or removed from the well.

**CAUTION<sub>3</sub>:** High differential pressure below the ASI-X Packer may cause the upper slips to wedge in tighter, requiring an extra amount of tension to release the upper slips.



# ASI-X HT PACKER

## 7-5/8" X 3-1/2"

Manual No:  
**DL-603-7625-122**

Revision: **D**

Revision Date:  
**02/11/2015**

Authored by: S.White

Approved by: J.McArthur

### G) STORAGE PROCEDURES

When preparing the tool for storage, follow the Pre-Installation Inspection Procedures. Re-assemble the tool with connections hand-tight only and in running position if applicable. Elements should be in a relaxed state—free from tension, compression, and other stresses that could cause deformation.

Store the tool, if possible, in an enclosed, temperature and humidity controlled environment. Avoid excessively high temperatures over long periods of time. Shield elastomeric parts from ultraviolet light sources. Keep tool dry and protected from condensation. Do not store in contact with or near volatile or corrosive chemicals. Do not store near ozone generating equipment or operations such as welding.

### H) PRESSURE AFFECTED AREA GUIDE

PACKER SIZE (INCHES)	TUBING SIZE (INCHES)	PRESSURE (SQ. INCHES)	
		ABOVE	BELOW
7-5/8" X 3-1/2"	2.375	6.43 DOWN	7.74 UP
	2.875	4.37 DOWN	6.19 UP
	3.500	1.24 DOWN	3.83 UP

**Example:** Consider a 7-5/8" X 3-1/2" ASI-X HT Packer set on 2.375" tubing with a differential pressure of 3,000 PSI in the annulus around the tubing above the packer. How much force is acting on the seal area of the mandrel?

To calculate the force (lbs) acting on the seal area of the mandrel, refer to the pressure affected area guide for a 7-5/8" X 3-1/2" ASI-X HT Packer set on 2.375" tubing. In this example, the differential pressure from above the packer acts down on the seal area of the mandrel area across a pressure affected area of 6.43 in<sup>2</sup>. Multiplying the differential pressure (3,000 PSI) by the pressure affected area (6.43 in<sup>2</sup>) results in a downward force of 19,290 lbs. 19,290 lbs is the force which needs to be overcome when releasing the packer.

### I) ELASTOMER TRIM TEMPERATURE GUIDE

NITRILE (STD)			
TEMPERATURE RANGE (F°)	DUROMETER		
	END	MIDDLE	END
70° - 125°	80	70	80
125° - 250°	90	70	90
250° - 300°	90	80	90
300° +	Contact D&L Sales		

RUBBER TYPE	TEMPERATURE RANGE
NITRILE	70° - 300°F
HSN (HNBR)	70° - 325°F
VITON	100° - 350°F



# ASI-X HT PACKER

## 7-5/8" X 3-1/2"

Manual No:  
**DL-603-7625-122**

Revision: **D**

Revision Date:  
**02/11/2015**

Authored by: S.White

Approved by: J.McArthur

## J) RECOMMENDED TOOLS

### J-1) HAND TOOLS

- VISE
- GLOVES
- ALLEN WRENCHES
- TAPE MEASURE
- O-RING PICK
- BAR
  - 1/2-INCH
  - 3/4-INCH
- PAINT BRUSH, 2-INCH
- PIPE WRENCH, 3-FT (2 EA)
- "CHEATER" PIPE, 4-FT LONG
- ADJUSTABLE WRENCH, 12-INCH
- CORDLESS DRILL, 18V
- SNAP RING SPREADER PLIERS
- ALIGNING PUNCH
- SCREWDRIVER SET, FLAT-TIPPED
- SOCKET SETS
  - 3/8-INCH DRIVE
  - 1/2-INCH DRIVE
- HAMMERS
  - SLEDGE
  - BALL PEEN
  - DEAD BLOW

### J-2) SPECIAL TOOLS

ITEM	QTY	DESCRIPTION	PART NUMBER
T1	1	DRAW BLOCK ASSEMBLY TOOL	AT070110

## K) DISASSEMBLY

K-1) Clamp top sub (1) in vise.

K-1.1) Unscrew and remove bottom nipple (30) from J-pin bottom sub (23).

K-1.2) Unscrew and remove set screws (34) from J-pin bottom sub (23). Move J-body (20) as needed to access screws.

K-1.3) Unscrew and remove J-pin bottom sub (23) from inner mandrel (2).

**NOTE<sub>3</sub>:** Drag block body assembly must be free to rotate.

K-1.3.1) Remove o-ring (37) from J-pin bottom sub (23).

K-1.4) Compress drag blocks (22) with drag block assembly tool (T1).

K-1.5) Unscrew and remove set screws (31) from J-body (20).

K-1.6) Unscrew and remove J-body (20) from drag block body (18) (**NOTE<sub>4</sub>:** Left-hand threads).

K-1.7) Remove drag block retainer (21) from drag block body (18).

K-1.8) Release drag blocks (22). Remove drag blocks (22) and drag block springs (3) from drag block body (18).

K-1.9) Unscrew and remove rubber mandrel cap (19) from rubber mandrel (11).

**NOTE<sub>5</sub>:** For added leverage, insert rod through rubber retainer (15) and rubber mandrel (11) as needed.

K-1.10) Remove drag block body assembly and disassemble:

K-1.10.1) Unscrew and remove socket cap screws (35) from drag block body (18).

K-1.10.2) Wedge lower slips (17) outward (if needed). Remove lower slip support (32) from drag block body (18).

K-1.10.3) Remove wedges. Remove lower slips (17) and lower slip springs (25) from drag block body (18).

K-1.11) Unscrew and remove lower cone (16) from rubber retainer (15).

K-1.12) Unscrew rubber mandrel (11) from center coupling (10).

K-1.13) Remove rubber mandrel assembly and disassemble:

K-1.13.1) Remove elements (13, 14), rubber spacers (12), and rubber retainer (15) from rubber mandrel (11).

K-1.13.1.1) Unscrew and remove gage ring (29) from rubber retainer (15).

K-1.14) Unscrew and remove center coupling (10) from upper cone (9).

K-1.14.1) Unscrew and remove gage ring (29) from center coupling (10).

K-1.14.2) Remove o-ring (38) from center coupling (10).



# ASI-X HT PACKER

## 7-5/8" X 3-1/2"

Manual No:  
**DL-603-7625-122**

Revision: **D**

Revision Date:  
**02/11/2015**

Authored by: S.White

Approved by: J.McArthur

### K) DISASSEMBLY (cont'd)

K-1.14.3) Remove bonded seal (24) from center coupling (10).

K-1.14.3.1) Remove o-ring (36) from bonded seal (24).

K-1.15) Remove upper cone (9) from inner mandrel (2).

K-2) Unclamp and remove top sub (1) from vise. Clamp lower end of inner mandrel (2) in vise.

**CAUTION<sub>4</sub>:** Do NOT wrench or clamp on seal surface.

K-2.1) Unscrew and remove spring cage cap (27) from spring cage (5).

**CAUTION<sub>5</sub>:** Compression spring (4) may have tension against upper slip body assembly.

K-2.2) Unscrew and remove top sub (1) from inner mandrel (2).

K-2.3) Remove compression spring (4) from spring cage (5).

K-2.4) Unscrew and remove spring cage (5) from upper slip body (6).

K-2.5) Remove upper slip body assembly and disassemble:

K-2.5.1) Remove spring retaining ring (28) from upper slip body (6).

K-2.5.2) Wedge releasing slip (7) and upper slips (8) outwards (if needed). Unscrew and remove upper slip support (33) from upper slip body (6).

K-2.5.3) Remove wedges (if needed). Remove releasing slip (7), upper slips (8), and upper slip springs (26) from upper slip body (6).

K-3) Unclamp and remove inner mandrel (2) from vise.

**NOTE<sub>6</sub>:** To redress tool assembly, follow disassembly instructions. It is recommended by D&L Oil Tools to replace bonded seals, elements, o-rings, shear screws, etc. when redressing tool.

### L) ASSEMBLY

**NOTE<sub>7</sub>:** Clean and inspect all parts. Replace all worn and damaged parts. Install parts in proper order, and orientation and tighten/torque all connections properly.

**CAUTION<sub>6</sub>:** To ensure tool operates properly, install o-rings in o-ring grooves NOT thread relief (Fig. 2).

L-1) Clamp inner mandrel (2) in vise.

**CAUTION<sub>4</sub>:** Do NOT wrench or clamp on seal surface (see SEAL SURFACES).

L-1.1) Assemble upper slip body assembly and install:

L-1.1.1) Install spring retaining ring (28) into upper slip support (33).

L-1.1.2) Screw spring cage (5) into upper slip support (33).

L-1.1.3) Install upper slips (8), releasing slip (7), and upper slip springs (26) into upper slip body (6). Wedge slips outwards.

**NOTE<sub>8</sub>:** Install two (2ea) springs per slip (Fig. 3)

L-1.1.4) Screw upper slip body (6) onto upper slip support (33). Remove wedges.

L-1.1.5) Install upper slip body assembly onto inner mandrel (2).

L-1.2) Install compression spring (4) into spring cage (5).

L-1.3) Screw top sub (1) onto inner mandrel (2).

L-1.4) Screw spring cage cap (27) onto spring cage (5).

**CAUTION<sub>5</sub>:** Compression spring (4) may have tension against upper slip body assembly.

L-2) Unclamp and remove inner mandrel (2) from vise. Clamp top sub (1) in vise.

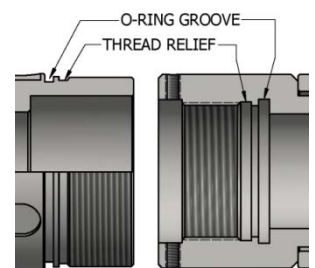


Fig. 2

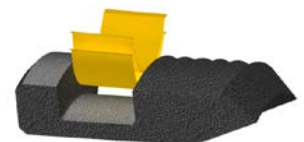


Fig. 3



# ASI-X HT PACKER

## 7-5/8" X 3-1/2"

Manual No:  
**DL-603-7625-122**

Revision: **D**

Revision Date:  
**02/11/2015**

Authored by: S.White

Approved by: J.McArthur

### L) ASSEMBLY (cont'd)

L-2.1) Install upper cone (9) onto inner mandrel (2).

L-2.2) Install o-ring (38) into o-ring groove in center coupling (10).

L-2.3) Install o-ring (36) into o-ring groove in bonded seal (24).

L-2.4) Install bonded seal (24) into center coupling (10).

**CAUTION<sub>7</sub>:** Do not rip or tear o-ring during installation.

L-2.5) Screw center coupling (10) into upper cone (9).

L-2.6) Screw gage ring (29) onto center coupling (10).

L-2.7) Assemble rubber mandrel assembly and install:

L-2.7.1) Screw gage ring (29) onto rubber retainer (15).

L-2.7.2) Install rubber retainer (15), elements (13, 14), and rubber spacers (12) onto rubber mandrel (11).

L-2.7.3) Install rubber mandrel assembly onto inner mandrel (2). Screw rubber mandrel (11) into center coupling (10).

**CAUTION<sub>7</sub>:** Do not rip or tear o-ring during installation.

**CAUTION<sub>4</sub>:** Do NOT wrench or clamp on seal surface (see SEAL SURFACES).

L-2.8) Screw lower cone (16) into rubber retainer (15).

L-2.9) Assemble drag block body assembly and install:

L-2.9.1) Install lower slips (17) and lower slip springs (25) into drag block body (18). Wedge slips outward.

**NOTE<sub>9</sub>:** Install two (2ea) springs per slip (Fig. 4).

L-2.9.2) Install lower slip support (32) into drag block body (18).

L-2.9.3) Align threaded holes in drag block body (18) with holes in lower slip support (32). Screw socket cap screws (35) into drag block body (18). Remove wedges.

L-2.9.4) Install drag block body assembly onto rubber mandrel (11).

L-2.10) Screw rubber mandrel cap (19) onto rubber mandrel (11).

**NOTE<sub>5</sub>:** For added leverage, insert rod through rubber retainer (15) and rubber mandrel (11) as needed.

L-2.11) Install drag blocks (22) and drag block springs (3) into drag block body (18). Compress blocks with drag block assembly tool (T1).

**NOTE<sub>10</sub>:** Install six (6ea) springs per drag block (Fig. 5).

L-2.12) Install drag block retainer (21) onto drag block body (18) capturing ends of drag blocks (22).

L-2.13) Screw J-body (20) onto drag block body (18) (**NOTE<sub>4</sub>:** Left-hand threads).

L-2.14) Screw set screws (31) into J-body (20). Release drag blocks (22).

L-2.15) Install o-ring (37) into o-ring groove in J-pin bottom sub (23).

L-2.16) Screw J-pin bottom sub (23) onto inner mandrel (2).

**CAUTION<sub>7</sub>:** Do not rip or tear o-ring during installation.

**NOTE<sub>3</sub>:** Drag block body assembly must be free to rotate.

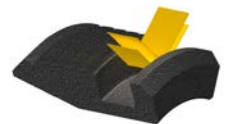


Fig. 4



Fig. 5

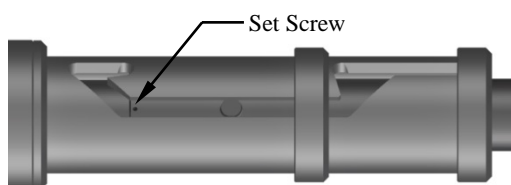


Fig. 6

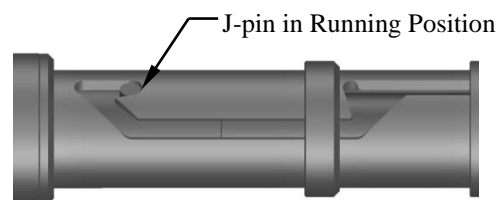


Fig. 7



# ASI-X HT PACKER

## 7-5/8" X 3-1/2"

Manual No:  
**DL-603-7625-122**

Revision: **D**

Revision Date:  
**02/11/2015**

Authored by: S.White

Approved by: J.McArthur

### L) ASSEMBLY (cont'd)

L-2.17) Screw set screws (32) into J-pin bottom sub (23). Move J-body (20) as needed (Fig. 6).

L-2.18) Screw bottom nipple (30) into J-pin bottom sub (23).

L-2.19) Position J-pin in running position in J-slot of J-body (20) (Fig. 7).

L-3) Unclamp top sub (1) from vise and remove assembled tool.

### M) PARTS LIST

ITEM	QTY	DESCRIPTION	MATERIAL	P/N 60377HT (33.7 - 39.0#)	P/N 60378HT (24.0 - 29.7#)
1	1	TOP SUB *	P-110	60173610HT (60073610HT*)	
2	1	INNER MANDREL	P-110	60373210HT	
3	24	DRAG BLOCK SPRING	INCONEL	9101900	
4	1	COMPRESSION SPRING	CHROME VANADIUM	60373920	
5	1	SPRING CAGE *	1026	60174310 (60373310*)	
6	1	UPPER SLIP BODY	P-110/1026	60377320HT	
7	1	RELEASING SLIP	P-110	60075125	
8	2	UPPER SLIP	1026	60075115	
9	1	UPPER CONE	P-110	60377410HT	
10	1	CENTER COUPLING	1026	60273620	
11	1	RUBBER MANDREL	1026	60073220	
12	2	RUBBER SPACER	1026	60277840	60378840
13	1	ELEMENT	80 DURO NITRILE	60277512	60278512
14	2	ELEMENT	90 DURO NITRILE	60277513	60278513
15	1	RUBBER RETAINER	1026	60377850	
16	1	LOWER CONE	P-110	60377421HT	
17	4	LOWER SLIP	1026	60075135	
18	1	DRAG BLOCK BODY	1026	60377335	
19	1	RUBBER MANDREL CAP *	1026	60173230 (60073230*)	
20	1	J-BODY *	1026	60173340HT (60373340HT*)	
21	1	DRAG BLOCK RETAINER	1026	60377910	

\* P/N may be substituted.





# ASI-X HT PACKER

## 7-5/8" X 3-1/2"

Manual No:  
**DL-603-7625-122**

Revision: **D**

Revision Date:  
**02/11/2015**

Authored by: S.White

Approved by: J.McArthur

### M) PARTS LIST (cont'd)

ITEM	QTY	DESCRIPTION	MATERIAL	P/N 60377HT (33.7 – 39.0#)	P/N 60378HT (24.0 - 29.7#)
22	4	DRAG BLOCK	8620	9070900	
23	1	J-PIN BOTTOM SUB	P-110	60373634HT	
24	1	BONDED SEAL	90 DURO NITRILE	60073520	
25	8	LOWER SLIP SPRING	ELGILOY	7170901	
26	6	UPPER SLIP SPRING	ELGILOY	7170902	
27	1	SPRING CAGE CAP *	1026	60174810 (60073810*)	
28	1	SPRING RETAINING RING	1026	60073820	
29	2	GAGE RING	1026	60277830	60378830
30	1	BOTTOM NIPPLE	L-80	60373636	
31	2	SOCKET CAP SCREW 3/8-16 UNC X 3/4	STEEL	SCS037C075	
32	1	LOWER SLIP SUPPORT	1026	60377912	
33	1	UPPER SLIP SUPPORT	1026	60377880	
34	2	SET SCREW 1/4-20 UNC X 3/8	STEEL	SSS025C037	
35	3	SET SCREW 3/8-16 UNC X 1/2	STEEL	SSS037C050	
36	1	155 O-RING	90 DURO NITRILE	90155	
37	1	237 O-RING	90 DURO NITRILE	90237	
38	1	243 O-RING	90 DURO NITRILE	90243	

\* P/N may be substituted.

REDRESS KIT (RDK)		60377050HT	60378050HT
ASSEMBLED WEIGHT		364 LBS	366 LBS





# ASI-X HT PACKER

## 7-5/8" X 3-1/2"

Manual No:  
**DL-603-7625-122**

Revision: **D**

Revision Date:  
**02/11/2015**

Authored by: S.White

Approved by: J.McArthur

### M-1) ELASTOMER TRIM OPTIONS PARTS LIST

#### M-1.1) HSN

**NOTE<sub>11</sub>:** For temperature range, refer to Elastomer Trim Temperature Guide.

ITEM	QTY	DESCRIPTION	MATERIAL	P/N 60377HTH (33.7 – 39.0#)	P/N 60378HTH (24.0 - 29.7#)
13	1	ELEMENT	80 DURO HSN	60277512H	60278512H
14	2	ELEMENT	90 DURO HSN	60277513H	60278513H
24	1	BONDED SEAL	90 DURO HSN	60073520H	
36	1	155 O-RING	90 DURO HSN	90155H	
37	1	237 O-RING	90 DURO HSN	90237H	
38	1	243 O-RING	90 DURO HSN	90243H	

REDRESS KIT (RDK)		60377050HTH	60378050HTH
-------------------	--	-------------	-------------

#### M-1.2) VITON

**NOTE<sub>11</sub>:** For temperature range, refer to Elastomer Trim Temperature Guide.

ITEM	QTY	DESCRIPTION	MATERIAL	P/N 60377HTV (33.7 – 39.0#)	P/N 60378HTV (24.0 - 29.7#)
13	1	ELEMENT	80 DURO VITON	60277512V	60278512V
14	2	ELEMENT	90 DURO VITON	60277513V	60278513V
24	1	BONDED SEAL	90 DURO VITON	60073520V	
36	1	155 O-RING	90 DURO VITON	90155V	
37	1	237 O-RING	90 DURO VITON	90237V	
38	1	243 O-RING	90 DURO VITON	90243V	

REDRESS KIT (RDK)		60377050HTV	60378050HTV
-------------------	--	-------------	-------------



# ASI-X HT PACKER

7-5/8" X 3-1/2"

Manual No:  
**DL-603-7625-122**


Revision: **D**

Revision Date:  
**02/11/2015**


Authored by: S.White


Approved by: J.McArthur

## N) TECHNICAL ILLUSTRATION

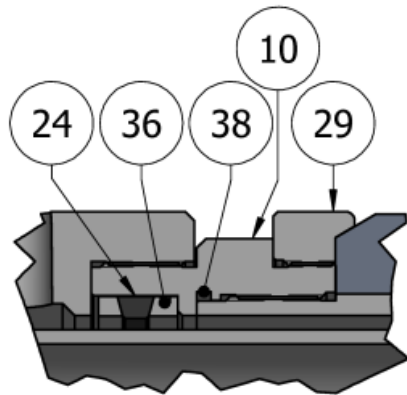


DETAIL A

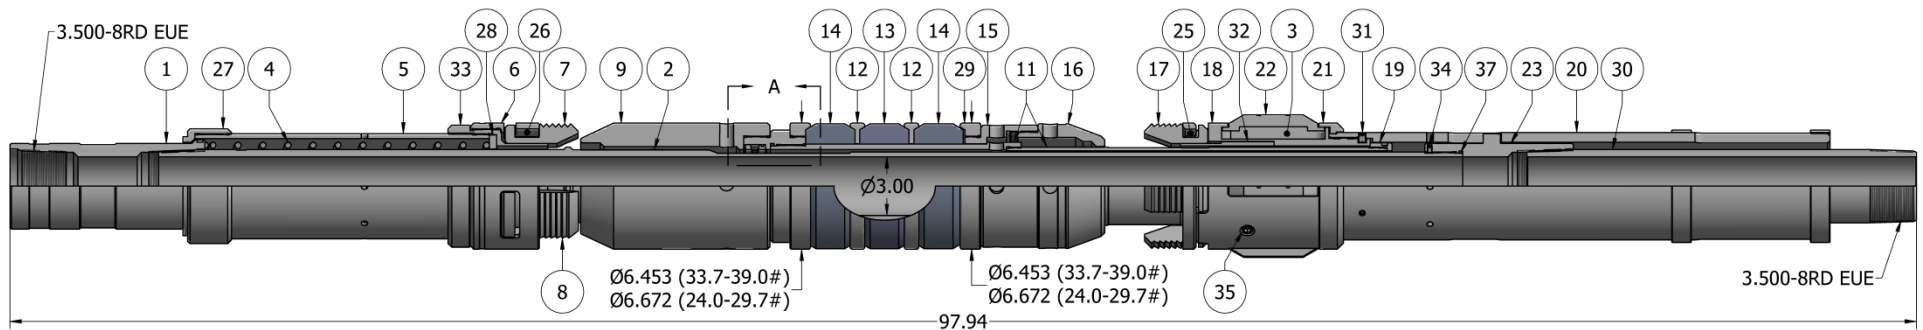

	<h1>ASI-X HT PACKER</h1> <h2>7-5/8" X 3-1/2"</h2>		Manual No:
			<b>DL-603-7625-122</b>
	Revision: <b>D</b>		Revision Date:
Authored by: S.White		Approved by: J.McArthur	

### O) SEAL SURFACES

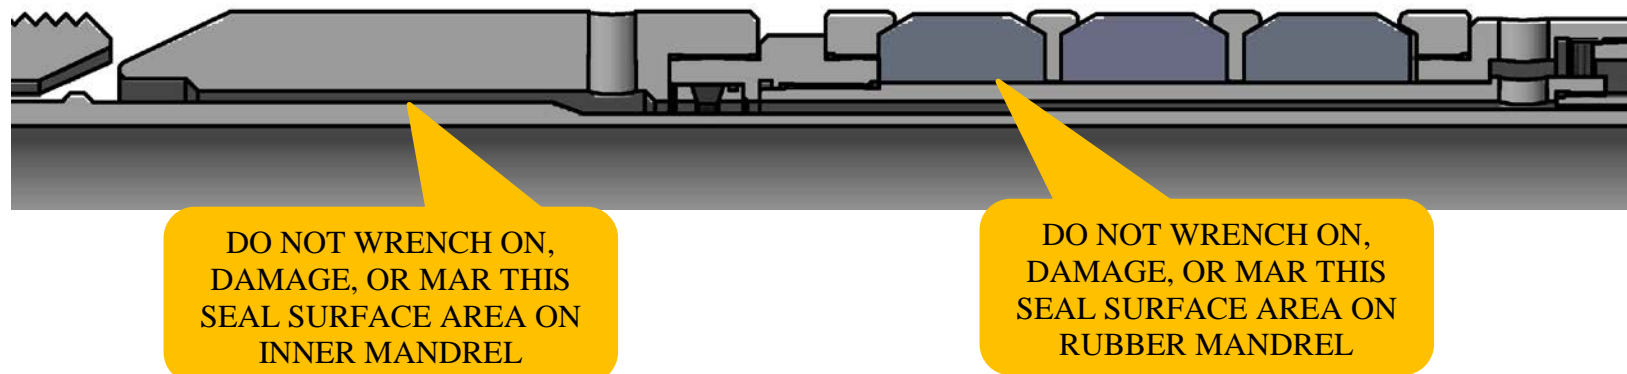

### P) REVISION HISTORY

DATE	REVISION	DESCRIPTION OF CHANGES	REVISED BY	APPROVED BY
02/11/2015	D	Added – Related Tools, Drift ID, Note2, Pre-Installation Inspection Procedures, Fig. 1, Caution2, Storage Procedures, Caution6, Note6, Fig. 2, Fig. 6, Fig. 7, L-2.19, Section to identify SEAL SURFACES; Revised – Description, ELASTOMER TRIM TEMPERATURE GUIDE was ELEMENT SELECTION GUIDE, P/N AT070110 was P/N DBAT70, Note7, Fig. 3, Caution4, Note11;	B.Mathis	J.McArthur
07/23/13	C	Added - HSN and Viton options (P/N 60378HTH, 60378HTV, 60377HTH, 60377HTV), max tensile load, Recommended Hand Tools, Note for substitute parts, Options Parts List, Revision History; Revised - Pressure Affected Area Guide 6.18 was 6.19, 3.83 was 3.82, Pressure Affected Area Guide Example, Assembly Tool P/N DBAT70 was AT070110, P/N 60173610HT was 60073610HT, 60174310 was 60373310, 60278512 was 60378512, 60278513 was 60378513, 60173230 was 60073230, 60173340HT was 60373340HT, 60174810 was 60073810; Removed - AFLAS from Element Selection Guide, Item T2 from Special Tools;	S.McEntire	J.McArthur