



ASI-X HT PACKER

9-5/8" X 4-1/2"

Manual No:
DL-603-9625-126

Revision: **H**

Revision Date:
04/02/2020

Authored by: S. White

Approved by: J. McArthur

A) DESCRIPTION

The ASI-X HT Single String Double-Grip Production Packer is the most versatile of the mechanically set retrievable packers and may be used in any production application. This packer is suited for treating, testing, or injection applications, in pumping or flowing wells, either deep or shallow. This packer can be left in tension or compression depending on well conditions and the required application.

A large internal by-pass reduces swabbing when running and retrieving. The by-pass closes when the packer is set and opens prior to releasing the upper slips when retrieving to allow pressure equalization. The J-slot design allows easy setting and releasing; 1/4 turn right-hand set, 1/4 turn right-hand release.

The ASI-X HT Packer is designed for differential pressures up to 10,000 PSI (unless noted otherwise). The HT version allows this packer to be utilized in completions where high pressure treating operations are performed and it is desirable to leave the tool in the well for production.

B) RELATED TOOLS (sold separately)

B-1) 4-1/2" DT-2 On/Off Tool and Stinger—refer to technical manual *DL-512-4500-140*.

C) SPECIFICATION GUIDE

CASING			TOOL		THREAD CONNECTION BOX UP / PIN DOWN	PART NUMBER
SIZE (INCHES)	WEIGHT (LBS/FT)	RECOMMENDED HOLE SIZE (INCHES)	OD (INCHES)	NOMINAL ID (INCHES)		
9-5/8	32.3 - 43.5	8.755 – 9.001	8.500	4.00	4-1/2 EUE	60396HT 60396HTH ¹ 60396HTV ²
	43.5 - 53.5	8.535 – 8.755	8.250	4.00	4-1/2 EUE	60395HT 60395HTH ¹ 60395HTV ²

Elastomer Trim Options: ¹HSN, ²Viton

NOTE₁: Tools listed are right hand set / right hand release.

DIFFERENTIAL PRESSURE (MAX)	TENSILE LOAD THRU TOOL (MAX)
8,000 PSI	154,000 LBS

D & L OIL TOOLS
P.O. BOX 52220 TULSA, OK 74152
PHONE: (800) 441-3504 www.dloiltools.com



ASI-X HT PACKER 9-5/8" X 4-1/2"

Manual No:
DL-603-9625-126

Revision: **H**

Revision Date:
04/02/2020

Authored by: S. White

Approved by: J. McArthur

D) PRE-INSTALLATION INSPECTION PROCEDURES

CAUTION₁: D&L ships tool connections made-up hand-tight—labeled with hand-tight tape on the tool—unless stated otherwise. Properly tighten connections before operating tool (Fig. 1).



Fig. 1

GENERAL THREAD CONNECTION TORQUE RECOMMENDATIONS			
STUB ACME / ACME THREADS	INTERNAL TAPERED TUBING THREADS		PREMIUM THREADS
	UP TO 2-3/8"	GREATER THAN 2-3/8"	
600 – 800 FT-LBS	600 – 800 FT-LBS	800 – 1,200 FT-LBS	Consult thread manufacturer's recommendations.

GENERAL SCREW TORQUE RECOMMENDATIONS									
SCREW SIZE (INCHES)	#6	#8	#10	1/4	5/16	3/8	7/16	1/2	5/8 and larger
TORQUE RANGE (INCH-POUNDS)	5 – 8	10 – 15	18 – 25	25 – 40	50 – 80	90 – 135	160 – 210	250 – 330	450 – 650

Before first use, D&L recommends disassembly and inspection of the tool unless stated otherwise. Ensure parts have not been damaged during shipping. Replace damaged parts with D&L replacement parts. Contact D&L sales for replacement part information.

Re-assemble the tool after inspection. Install parts in the correct order and orientation. Properly tighten connections.

Before re-using the tool, D&L recommends disassembly and inspection of the tool. Clean parts and ensure parts are in good working condition. Replace worn or damaged parts with D&L replacement parts.

When redressing the tool, D&L recommends replacement of all seals, elements, o-rings, shear screws, etc. Contact D&L sales for redress kit and/or other replacement part information.

E) SETTING PROCEDURES

CAUTION₂: Do not run the tool without properly tightening connections. Running the tool with loose connections may damage the tool and cause malfunction.

E-1) COMPRESSION SET

Run the packer to setting depth. Pick up the tubing to allow for setting stroke (12-13") plus desired tubing load. Rotate the tubing 1/4 right-hand turn at the packer, and then lower the tubing while releasing torque. Slack off on the tubing sufficient weight to set the packer (25,000 lbs). Pull tension to assure that the upper slips are set. The tubing can then be left in tension, compression or neutral. If insufficient weight is available to set the packer with compression, tension can be applied after slack-off to pack off the elements.

E-2) TENSION SET

Run to setting depth, pick up on the tubing and rotate 1/4 turn to the right at the packer then lower the tubing slacking off available weight to set the packer lower slips. Pull tension to set upper slips and pack off elements (25,000 lbs). After setting the packer, the tubing can be left in compression, tension or neutral.



ASI-X HT PACKER

9-5/8" X 4-1/2"

Manual No:
DL-603-9625-126

Revision: **H**

Revision Date:
04/02/2020

Authored by: S. White

Approved by: J. McArthur

F) RELEASING PROCEDURES

The releasing procedures are the same whether the packer has been tension or compression set. Set down weight on the packer to unseat the J-pin from the tension shoulder of the J-slot. Refer to the Pressure Affected Area Guide to determine necessary set down weight on the packer. Rotate the tubing 1/4 right-hand turn at the packer and pick up while holding right-hand torque. Weight in addition to pipe weight may be required to pick up on the packer - refer to Pressure Affected Area Guide. The internal by-pass will open, allowing pressure to equalize. After pressure is equalized, continue to pick up to release the upper slips, relax the elements and release the lower slips thus allowing the packer to be re-set or removed from the well.

CAUTION: High differential pressure below the ASI-X may cause the upper slips to wedge in tighter, requiring an extra amount of tension to release the upper slips.

G) STORAGE RECOMMENDATIONS

When preparing the tool for storage, follow the Pre-Installation Inspection Procedures. Re-assemble the tool with connections hand-tight only and in running position if applicable. Elements should be in a relaxed state—free from tension, compression or other deformation.

Store the tool, if possible, in an enclosed, temperature and humidity controlled environment. Avoid excessively high temperatures over long periods of time. Shield elastomeric parts from ultraviolet light sources. Keep tool dry and protected from condensation. Do not store in contact with or near volatile or corrosive chemicals. Do not store near ozone generating equipment or operations such as welding.

H) PRESSURE AFFECTED AREA GUIDE

PACKER SIZE (INCHES)	TUBING SIZE (INCHES)	PRESSURE AFFECTED AREA (SQ. INCHES)	
		ABOVE	BELOW
9-5/8	2.875	11.11 (DOWN)	-12.92 (UP)
	3.500	7.98 (DOWN)	-10.56 (UP)
	4.000	5.03 (DOWN)	-7.71 (UP)
	4.500	1.70 (DOWN)	-5.30 (UP)

Example: Consider a 9-5/8" X 4-1/2" ASI-X HT Packer run on 3.500" tubing with a differential pressure of 3,000 psi in the annulus around the tubing above the packer. What is the force acting on the seal area of the mandrel?

To calculate the force (lbs) acting on the seal area of the mandrel, refer to the Pressure Affected Area Guide for a 9-5/8" X 4-1/2" ASI-X HT Packer run on 3.500" tubing. In this example, the differential pressure from above the packer acts on the seal area of the packer mandrel across a pressure affected area of 7.98 in². Multiplying the differential pressure (3,000 psi) by the pressure affected area (7.98 in²) results in a force of 23,940 lbs. The piston effect on the packer mandrel is a downward force of 23,940 lbs.



ASI-X HT PACKER

9-5/8" X 4-1/2"

Manual No:
DL-603-9625-126

Revision: **H**

Revision Date:
04/02/2020

Authored by: S. White

Approved by: J. McArthur

I) ELASTOMER TRIM TEMPERATURE GUIDE

NITRILE (STD)			
TEMPERATURE RANGE (F°)	DUROMETER		
	END	MIDDLE	END
40° - 125°	80	70	80
125° - 250°	90	70	90
150° - 250°	90	80	90
250° +	Contact D&L Sales		

RUBBER TYPE	TEMPERATURE RANGE
NITRILE	40° - 250°F
HSN (HNBR)	70° - 300°F
VITON	100° - 350°F

J) RECOMMENDED TOOLS

J-1) HAND TOOLS

- VISE
- GLOVES
- ALLEN WRENCHES
- TAPE MEASURE
- O-RING PICK
- BAR
 - 1/2-INCH
 - 3/4-INCH
- PAINT BRUSH, 2-INCH
- PIPE WRENCH, 3-FT (2 EA)
- "CHEATER" PIPE, 4-FT LONG
- ADJUSTABLE WRENCH, 12-INCH
- CORDLESS DRILL, 18V
- SNAP RING SPREADER PLIERS
- ALIGNING PUNCH
- SCREWDRIVER SET, FLAT-TIPPED
- SOCKET SETS
 - 3/8-INCH DRIVE
 - 1/2-INCH DRIVE
- HAMMERS
 - SLEDGE
 - BALL PEEN
 - DEAD BLOW

J-2) SPECIAL TOOLS

ITEM	QTY	DESCRIPTION	PART NUMBER
T1	1	DRAW BLOCK ASSEMBLY TOOL	AT010110

K) DISASSEMBLY

K-1) Clamp top sub (1) in vise.

K-1.1) Unscrew and remove bottom nipple (28) from J-pin bottom sub (23).

K-1.2) Unscrew and remove J-pin bottom sub (23) from inner mandrel (2).

NOTE2: Drag block body assembly must be free to rotate.

K-1.2.1) Remove o-ring (45) from J-pin bottom sub (23).

K-1.3) Compress drag blocks (22) with drag block assembly tool (T1).

K-1.4) Unscrew and remove set screws (36) from drag block body (18). Rotate drag block retainer (21) as needed to access set screws (36).

K-1.5) Unscrew and remove J-body (20) from drag block body (18) (**NOTE3:** Left-hand threads).

K-1.5.1) Remove retaining ring (31) from J-body (20).

K-1.6) Remove drag block retainer (21) from drag block body (18).

K-1.7) Release drag blocks (22). Remove drag blocks (22) and drag block springs (3) from drag block body (18).

K-1.8) Unscrew and remove rubber mandrel cap (19) from rubber mandrel (11).

NOTE4: For added leverage, insert a rod through lower cone (16) and rubber mandrel (11) as needed.

K-1.9) Wedge lower slips (17) outwards (if needed). Remove drag block body assembly and disassemble:

K-1.9.1) Unscrew and remove cap screw (41) from drag block body (18).

K-1.9.2) Remove lower slip support (32) from drag block body (18).



ASI-X HT PACKER

9-5/8" X 4-1/2"

Manual No:
DL-603-9625-126

Revision: **H**

Revision Date:
04/02/2020

Authored by: S. White

Approved by: J. McArthur

K) DISASSEMBLY (cont'd)

- K-1.9.3) Remove wedges (if needed). Remove lower slips (17) and lower slip springs (25) from drag block body (18).
- K-1.10) Unscrew and remove lower cone (16) from rubber retainer (15).
- K-1.11) Unscrew rubber mandrel (11) from center coupling (10).
- K-1.12) Remove rubber mandrel assembly from inner mandrel (2) and disassemble:
- K-1.12.1) Remove elements (13, 14), rubber spacers (12), and rubber retainer (15) from secondary rubber mandrel (40).
 - K-1.12.2) Remove secondary rubber mandrel (40) from rubber mandrel (11).
 - K-1.12.3) Remove o-ring (44) from rubber mandrel (11).
- K-1.13) Unscrew and remove gage ring (29) from center coupling (10).
- K-1.14) Unscrew and remove center coupling (10) from collet cone (9).
- K-1.14.1) Remove bonded seal (24) and o-rings (43) from center coupling (10).
- K-1.15) Remove collet cone (9) and bearing bushing (30) from inner mandrel (2).
- K-2) Remove top sub (1) from vise. Clamp inner mandrel (2) in vise.
- CAUTION₇:** Do NOT wrench or clamp on seal surface.
- K-2.1) Unscrew and remove spring cage cap (27) from spring cage (5).
- CAUTION₄:** Compression spring (4) is compressed with spring tension against upper slip body assembly.
- K-2.2) Unscrew and remove top sub (1) from inner mandrel (2).
- K-2.3) Remove compression spring (4) from spring cage (5).
- K-2.4) Unscrew and remove cap screws (42) from spring retaining ring (34).
- K-2.5) Unscrew and remove spring cage (5) from upper slip support (33).
- K-2.6) Remove spring retaining ring (34) from inner mandrel (2).
- K-2.7) Wedge releasing slip (7) and upper slips (8) outwards (if needed). Remove upper slip body assembly and disassemble:
- K-2.7.1) Unscrew and remove upper slip support (33) from upper slip body (6).
 - K-2.7.2) Remove wedges (if needed). Remove releasing slip (7), upper slips (8) and upper slip springs (26) from upper slip body (6).
- K-2.8) Unscrew and remove swivel sleeve cap (37) from swivel sleeve (38).
- K-2.9) Remove snap ring (39) from inner mandrel (2).
- K-2.10) Remove swivel sleeve (38) and thrust ring (35) from inner mandrel (2).
- K-3) Remove inner mandrel (2) from vise.

L) ASSEMBLY

NOTE₆: Clean and inspect all parts. Replace all worn and damaged parts. Install parts in proper order and orientation.

CAUTION₅: To ensure tool operates properly, install o-rings in o-ring grooves, NOT thread reliefs unless stated otherwise (Fig. 2).

- L-1) Clamp lower end of inner mandrel (2) in vise.

CAUTION₇: Do NOT wrench or clamp on seal surface.

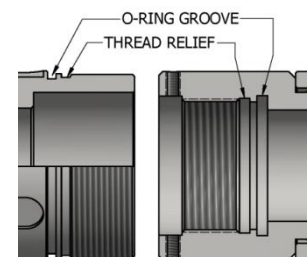


Fig. 2



ASI-X HT PACKER

9-5/8" X 4-1/2"

Manual No:
DL-603-9625-126

Revision: **H**

Revision Date:
04/02/2020

Authored by: S. White

Approved by: J. McArthur

L) ASSEMBLY (cont'd)

L-1.1) Install thrust ring (35) and swivel sleeve (38) onto inner mandrel (2).

L-1.2) Install snap ring (39) in groove in inner mandrel (2).

L-1.3) Screw swivel sleeve cap (37) onto swivel sleeve (38).

L-1.4) Assemble upper slip body assembly and install:

L-1.4.1) Screw upper slip support (33) into upper slip body (6).

L-1.4.2) Install releasing slip (7), upper slips (8) and upper slip springs (26) into upper slip body (6).

NOTE: Uses two (2 ea) springs per slip (Fig. 3).

L-1.4.3) Wedge slips outwards. Install upper slip body assembly onto inner mandrel (2).

L-1.5) Install spring retaining ring (34) into spring cage (5).

L-1.6) Align holes in spring cage (5) with threaded holes in spring retaining ring (34). Screw cap screws (42) into spring retaining ring (34).

L-1.7) Install spring retaining ring (34) and spring cage (5) onto inner mandrel (2). Screw spring cage (5) into upper slip support (33).

L-1.8) Install compression spring (4) onto inner mandrel (2) and into spring cage (5).

L-1.9) Screw top sub (1) onto inner mandrel (2).

L-1.10) Screw spring cage cap (27) onto spring cage (5).

CAUTION: Compression spring (4) is compressed with spring tension against spring cage assembly.

L-2) Remove inner mandrel (2) from vise. Clamp top sub (1) in vise.

L-2.1) Install collet cone (9) and bearing bushing (30) onto inner mandrel (2).

L-2.2) Install o-rings (43) in grooves in center coupling (10).

L-2.3) Install bonded seal (24) into center coupling (10).

CAUTION: Do not rip or tear o-rings during installation.

L-2.4) Screw center coupling (10) into collet cone (9).

L-2.5) Screw gage ring (29) onto center coupling (10).

L-2.6) Assemble rubber mandrel assembly and install:

L-2.6.1) Install o-ring (44) in groove in rubber mandrel (11).

L-2.6.2) Install secondary rubber mandrel (40) onto rubber mandrel (11).

CAUTION: Do not rip or tear o-ring during installation.

L-2.6.3) Install rubber retainer (15), elements (13, 14), and rubber spacers (12) onto secondary rubber mandrel (40).

L-2.6.4) Install rubber mandrel assembly onto inner mandrel (2).

L-2.7) Screw rubber mandrel (11) into center coupling (10).

L-2.8) Screw lower cone (16) into rubber retainer (15).

L-2.9) Assemble drag block body assembly and install:

L-2.9.1) Install lower slips (17) and lower slip springs (25) into drag block body (18). Wedge slips outward.

NOTE: Uses two (2 ea) springs per slip (Fig. 4).

L-2.9.2) Install lower slip support (32) into drag block body (18).

L-2.9.3) Align holes in drag block body (18) with threaded holes in lower slip support (32). Screw cap screws (41) into drag block body (18). Remove wedges.

L-2.9.4) Install drag block body assembly onto rubber mandrel (11).

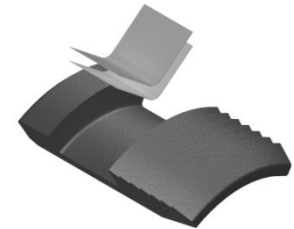


Fig. 3

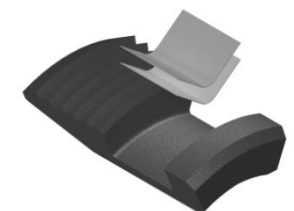


Fig. 4



ASI-X HT PACKER

9-5/8" X 4-1/2"

Manual No:
DL-603-9625-126

Revision: **H**

Revision Date:
04/02/2020

Authored by: S. White

Approved by: J. McArthur

L) ASSEMBLY (cont'd)

L-2.10) Screw rubber mandrel cap (19) onto rubber mandrel (11).

NOTE4: For added leverage, insert a rod through lower cone (16) and rubber mandrel (11) as needed.

L-2.10.1) Install drag blocks (22) and drag block springs (3) in drag block body (18). Compress drag blocks (22) with drag block assembly tool (T1).

NOTE7: Uses six (6 ea) springs per drag block (Fig. 5).

L-2.10.2) Install drag block retainer (21) onto drag block body (18) capturing ends of drag blocks (22).

L-2.11) Install retaining ring (31) onto J-body (20).

L-2.12) Screw J-body (20) onto drag block body (18) (**NOTE3:** Left-hand threads).

L-2.13) Align holes in drag block retainer (21) with threaded holes in drag block body (18). Screw set screws (36) into drag block body (18). Release drag blocks (22).

L-2.14) Install o-ring (45) in groove in J-pin bottom sub (23).

L-2.15) Screw J-pin bottom sub (23) onto inner mandrel (2).

NOTE2: Drag block body assembly must be free to rotate.

CAUTION6: Do not rip or tear o-ring during installation.

L-2.16) Screw bottom nipple (28) into J-pin bottom sub (23).

L-3) Unclamp top sub (1) from vise and remove assembled tool.

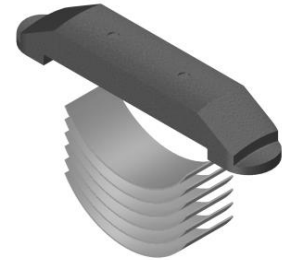


Fig. 5

M) PARTS LIST

ITEM	QTY	DESCRIPTION	MATERIAL	43.5 – 53.5# 60395HT	32.3 – 43.5# 60396HT
1	1	TOP SUB	DLMS110	60195610HT	
2	1	INNER MANDREL	DLMS110	60395210HT	
3	36	DRAG BLOCK SPRING	INCONEL	9101900	
4	1	COMPRESSION SPRING	DLMCRSP	60395920HT	
5	1	SPRING CAGE	DLMS60	60195311	
6	1	UPPER SLIP BODY	DLMS110 / DLMS80	60395320	
7	1	RELEASING SLIP	DLMS110	60095125	
8	2	UPPER SLIP	DLMS35	60095115	
9	1	COLLET CONE	DLMS110	60395414	
10	1	CENTER COUPLING	DLMS80	60095620HT	
11	1	RUBBER MANDREL	DLMS110	60313220HT	
12	2	RUBBER SPACER	DLMS35	60295840S	60296840S
13	2	ELEMENT	80 DURO NITRILE	60295513S	60296513S
14	1	ELEMENT	90 DURO NITRILE	60295512S	60296512S
15	1	RUBBER RETAINER	DLMS110	60295850SHT	60296850SHT
16	1	LOWER CONE	DLMS110	60395420SHT	



ASI-X HT PACKER

9-5/8" X 4-1/2"

Manual No:
DL-603-9625-126

Revision: **H**

Revision Date:
04/02/2020

Authored by: S. White

Approved by: J. McArthur

M) PARTS LIST (cont'd)

ITEM	QTY	DESCRIPTION	MATERIAL	43.5 – 53.5# 60395HT	32.3 – 43.5# 60396HT
17	4	LOWER SLIP	DLMS35	60095135	
18	1	DRAG BLOCK BODY	DLMS60 / DLMS35	60395335	
19	1	RUBBER MANDREL CAP	DLMS80	60195230	
20	1	J-BODY	DLMS60	60195340	
21	1	DRAG BLOCK RETAINER	DLMS60	60395910	
22	6	DRAG BLOCK	DLMSDB8	9080900	
23	1	J-PIN BOTTOM SUB	DLMS110	60395634HT	
24	1	BONDED SEAL	90 DURO NITRILE	60095520	
25	8	LOWER SLIP SPRING	ELGILOY	7170901	
26	6	UPPER SLIP SPRING	ELGILOY	7170902	
27	1	SPRING CAGE CAP	DLMS35	60095810	
28	1	BOTTOM NIPPLE	DLMS110	60395636	
29	1	GAGE RING	DLMS110	60295830HT	60296830HT
30	1	BEARING BUSHING	DLMS60	60097104	
31	1	RETAINING RING	DLMS35	60095911	
32	1	LOWER SLIP SUPPORT	DLMS110	60395912HT	
33	1	UPPER SLIP SUPPORT	DLMS110	60395880HT	
34	1	SPRING RETAINER RING	DLMS35	60395107	
35	1	THRUST RING	DLMS110	60395103	
36	3	SET SCREW 3/8-16 UNC X 5/8	STEEL	SSS037C062	
37	1	SWIVEL SLEEVE CAP	DLMS110	60395106	
38	1	SWIVEL SLEEVE	DLMS110	60395100	
39	1	SNAP RING	DLMS60	60097102	
40	1	SECONDARY RUBBER MANDREL	DLMS110	60095221HT	
41	1	CAP SCREW 1/2-13 UNC X 3/4	STEEL	SCS050C075	
42	6	CAP SCREW 3/8-16 UNC X 3/4	STEEL	SCS037C075	
43	2	160 O-RING	90 DURO NITRILE	90160	
44	1	254 O-RING	90 DURO NITRILE	90254	
45	1	348 O-RING	90 DURO NITRILE	90348	

REDRESS KIT (RDK)		60395050HT	60396050HT
ASSEMBLED WEIGHT		561 LBS	566 LBS



ASI-X HT PACKER

9-5/8" X 4-1/2"

Manual No:
DL-603-9625-126

Revision: **H**

Revision Date:
04/02/2020

Authored by: S. White

Approved by: J. McArthur

M) PARTS LIST (cont'd)

M-1) ELASTOMER TRIM OPTIONS

NOTE: For temperature range, refer to Elastomer Trim Temperature Guide.

M-1.1) HSN

ITEM	QTY	DESCRIPTION	MATERIAL	43.5 – 53.5# 60395HTH	32.3 – 43.5# 60396HTH
13	2	ELEMENT	90 DURO HSN	60295513SH	60296513SH
14	1	ELEMENT	80 DURO HSN	60295512SH	60296512SH
24	1	BONDED SEAL	90 DURO HSN	60095520H	
43	2	160 O-RING	90 DURO HSN	90160H	
44	1	254 O-RING	90 DURO HSN	90254H	
45	1	348 O-RING	90 DURO HSN	90348H	

REDRESS KIT (RDK)		60395050HTH	60396050HTH
-------------------	--	-------------	-------------

M-1.2) VITON

ITEM	QTY	DESCRIPTION	MATERIAL	43.5 – 53.5# 60395HTV	32.3 – 43.5# 60396HTV
13	2	ELEMENT	90 DURO VITON	60295513SV	60296513SV
14	1	ELEMENT	80 DURO VITON	60295512SV	60296512SV
24	1	BONDED SEAL	90 DURO VITON	60095520V	
43	2	160 O-RING	90 DURO VITON	90160V	
44	1	254 O-RING	90 DURO VITON	90254V	
45	1	348 O-RING	90 DURO VITON	90348V	

REDRESS KIT (RDK)		60395050HTV	60396050HTV
-------------------	--	-------------	-------------



ASI-X HT PACKER

9-5/8" X 4-1/2"

Manual No:
DL-603-9625-126


Revision: **H**


Revision Date:
04/02/2020

Authored by: S. White

Approved by: J. McArthur

N) TECHNICAL ILLUSTRATION

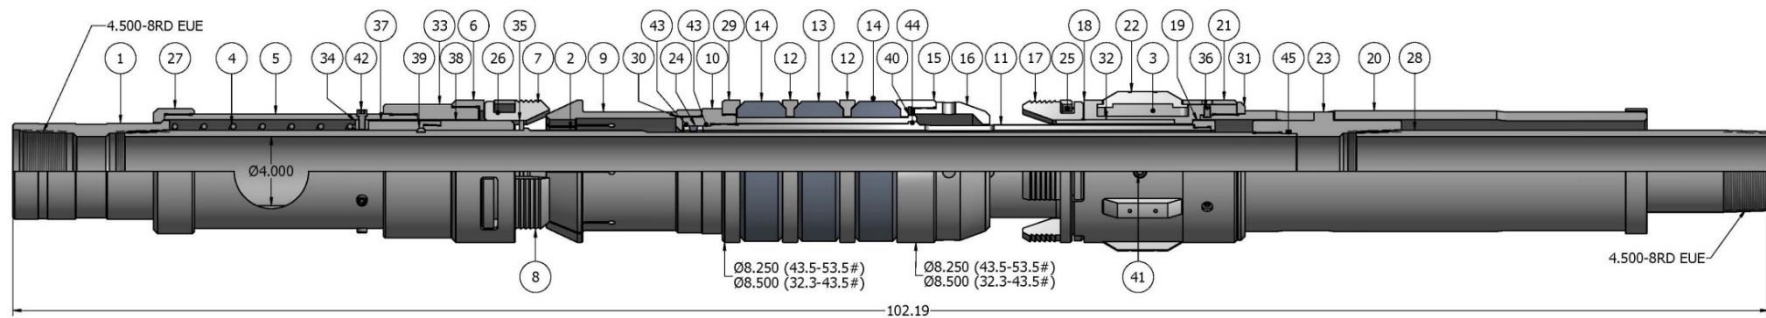

	<div>ASI-X HT PACKER</div> <div>9-5/8” X 4-1/2”</div>		Manual No:	
			DL-603-9625-126	
			Revision: H	
			Revision Date:	
		04/02/2020		
Authored by: S. White		Approved by: J. McArthur		

O) REVISION HISTORY

DATE	REVISION	DESCRIPTION OF CHANGES	REVISED BY	APPROVED BY
04/02/2020	H	Revised 60195610HT was 60095610HT, 60195311 was 60395311, 60195230 was 60095230, 60195340 was 60395340	J.Anderson	E.Visaez
08/07/2019	G	Removed tool drift ID; Added General Screw Torque Recommendations; Revised Elastomer Trim Temperature Guide Nitrile temp rating was 70-300, HSN temp rating was 70-325	J.Anderson	J.Johnson
04/11/14	F	Revised PN 60095911 was 60395911, PN 60395HT assembled weight was 558 lbs; Added related tools, drift ID, pre-installation inspection procedures, and storage procedures, recommended hand tools, HSN and Viton options	J.Anderson	K.Riggs